



K35系列管状电机-NTY-说明书

公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。 A/2 H12140

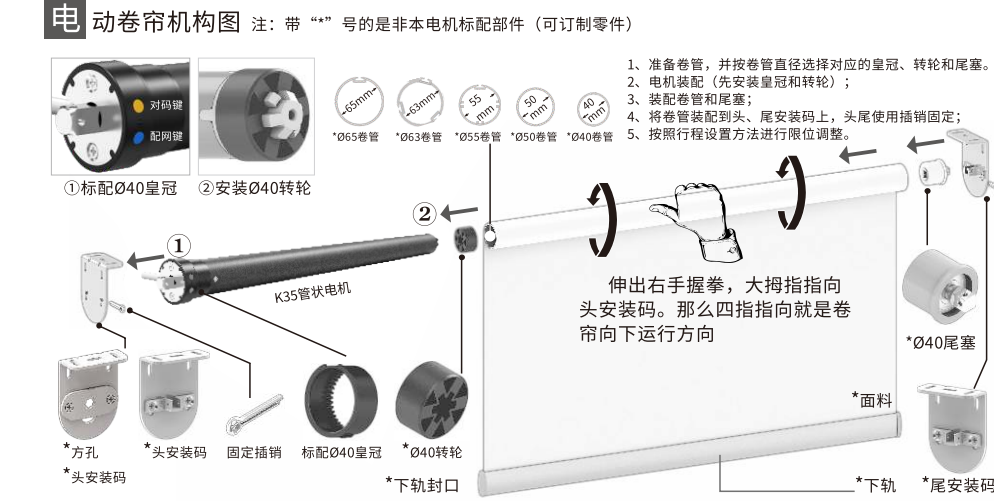


操作说明 (*以A13按键发射器为例进行说明,其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码,再增加遥控器只会覆盖第一个;

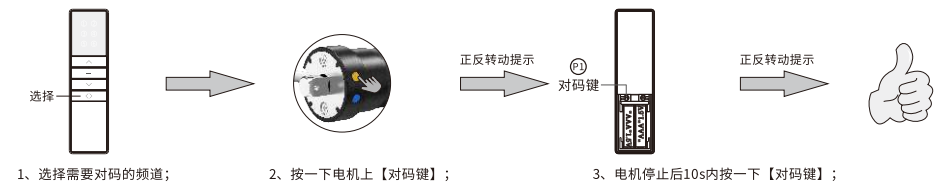


消码: 消除电机上所有接收存储发射器的记忆,其它设置不会改变或清除:

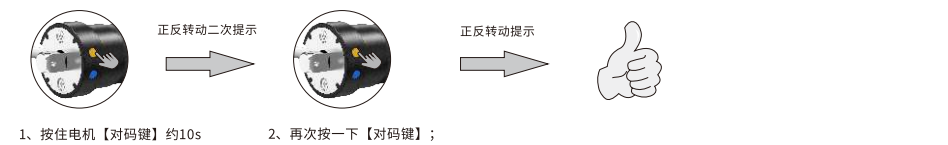


点动/连动模式互换: 电机出厂默认为连动模式,长按住【上行键】或【下行键】约2s电机会一直连动运转:

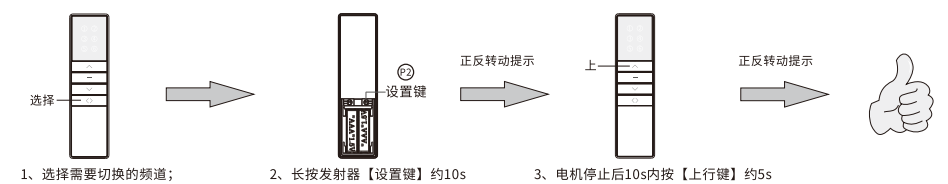



复制: 为已经对码的电机新增一个B发射器:

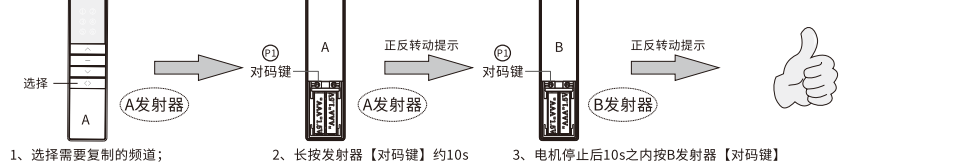


换向: 切换已对上码电机运转方向。如:换向前,按发射器上行键,窗帘往下运行;换向后,按发射器上行键,窗帘往上运行:

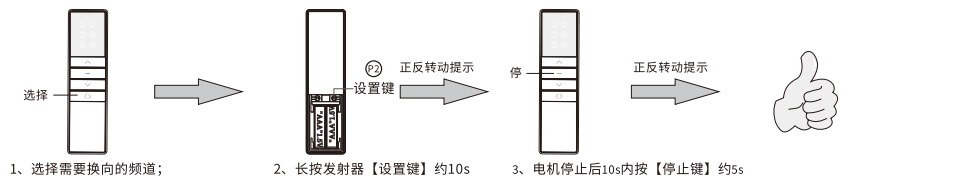


上限位/下限位设置: 指按发射器【上行键或下行键】时,窗帘向上/向下运行,所能到达的理想最高/最低位置。

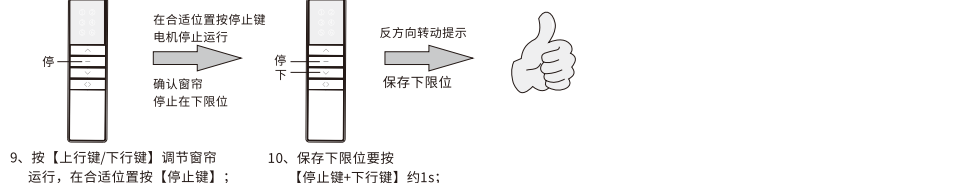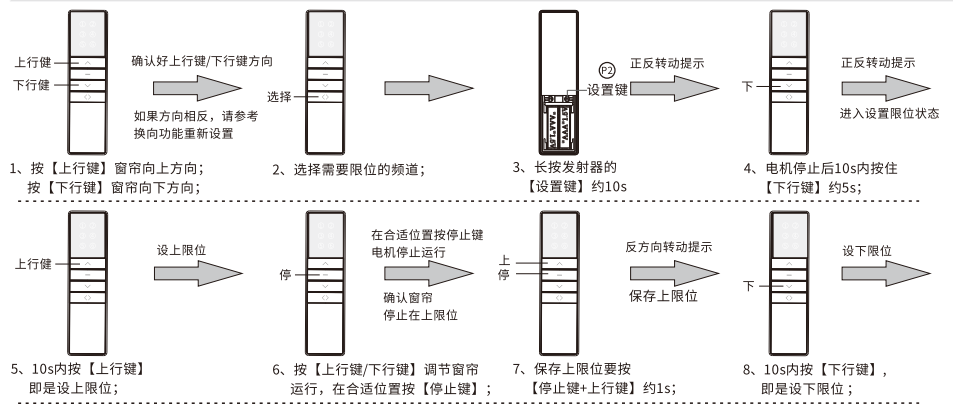


喜爱位置设置: 窗帘运行到喜爱位置,重复操作可删除喜爱位置:

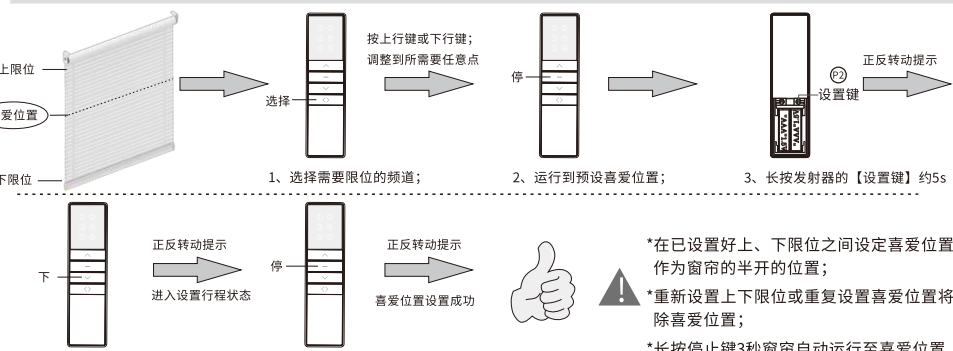

wifi 恢复出厂设置方法:

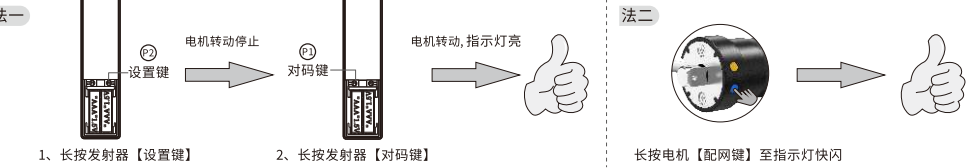


APP配网方法:

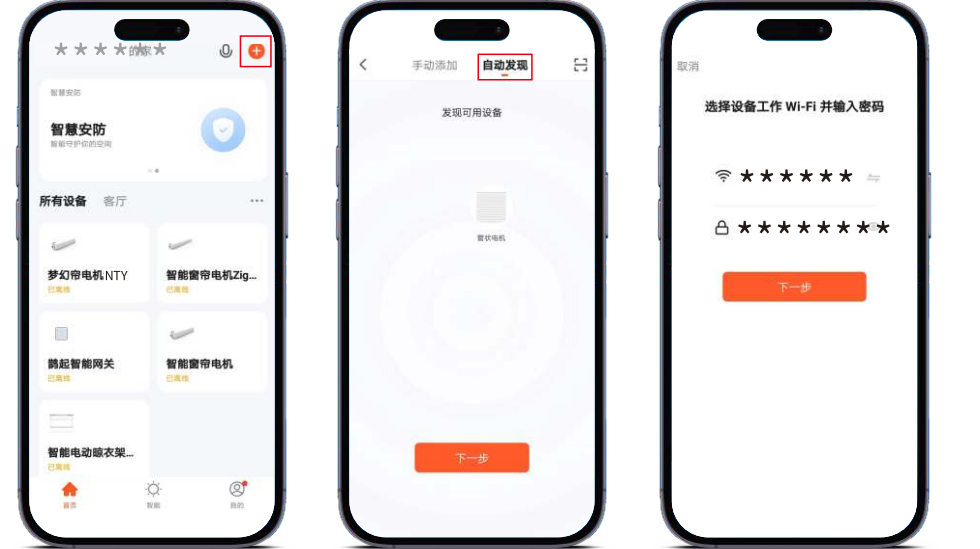

04. 等待设备连接
05. 添加成功,按完成
06. 最终操作界面如上图所示




上限位/下限位/喜爱位置设置: 指按APP【开启】键或者【关闭】键时,窗帘向上/向下运行,所能到达的最高/最低位置。

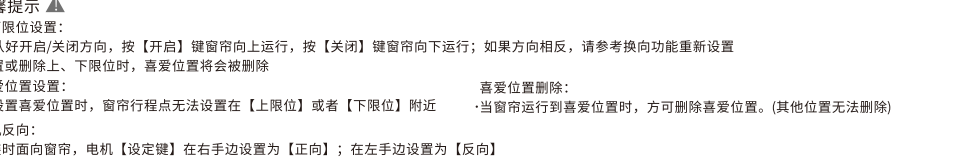

APP配网方法:



04. 等待设备连接
05. 添加成功,按完成
06. 最终操作界面如上图所示

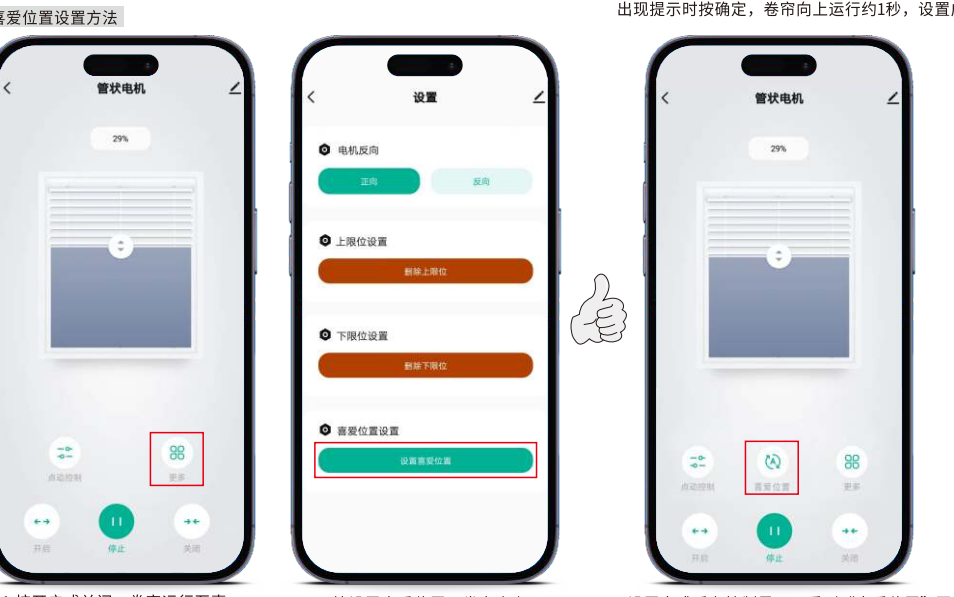


K35 Tubular Motor NTY Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12140 A/2

E Electric roller blind draft


Note: the accessories which mark with "*" are not standard assembly unit. (Available for custom made accessories.)

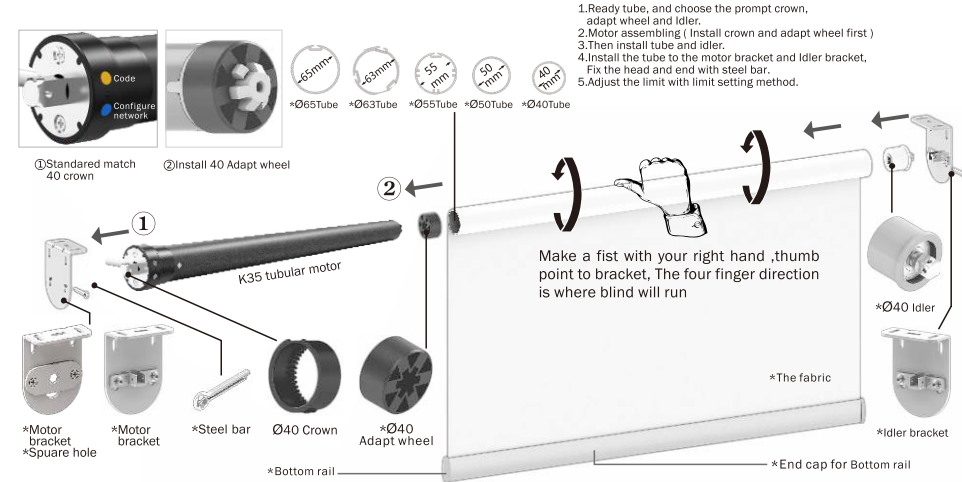


T Transmitter operating instructions

(*Take A13 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

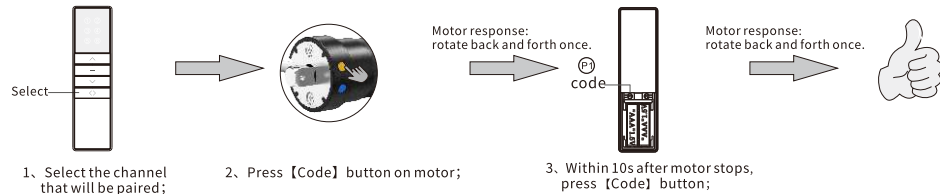


Clear pairing : Clear all pairing on the motor:

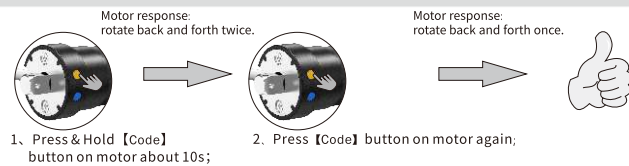


Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

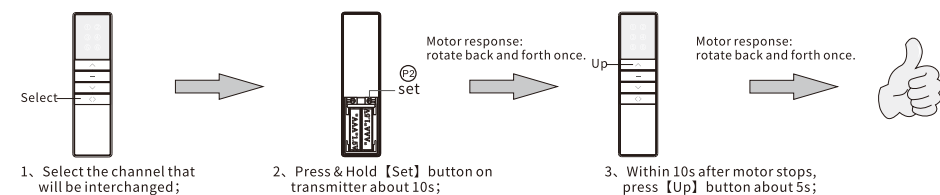


Copy: Add a new channel to control motor. (No need to touch motor):

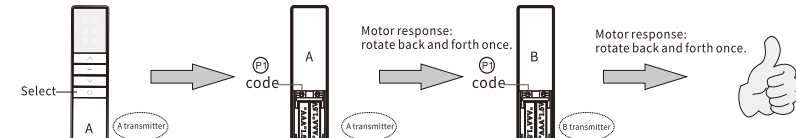


Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

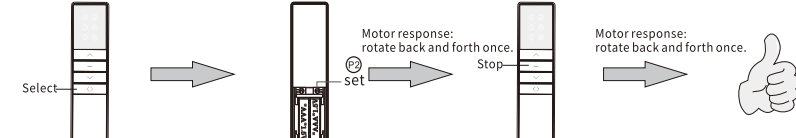


Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

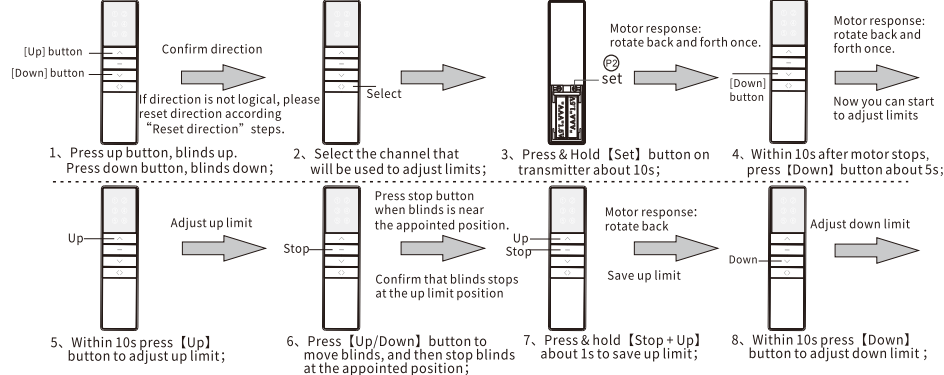


Third position set: move the blinds to third position, then repeat the operation once to delete the third position.

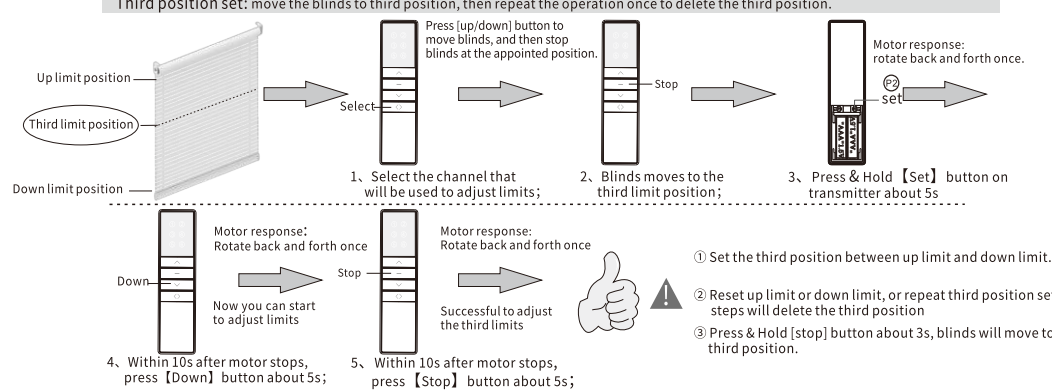

Reset Wi-Fi:

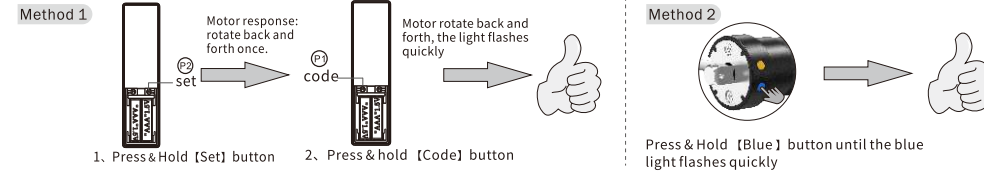


Configure network method:

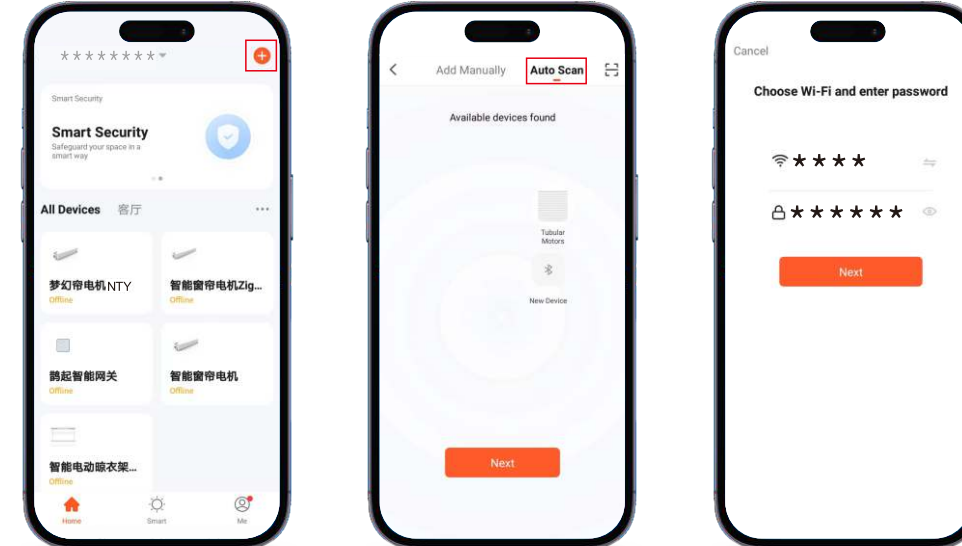

01. Open Tuya App, click "+"

02. Click "Auto Scan", when prompt "Available devices found" then click "next"

03. Input Wi-Fi name and password, then click "next"

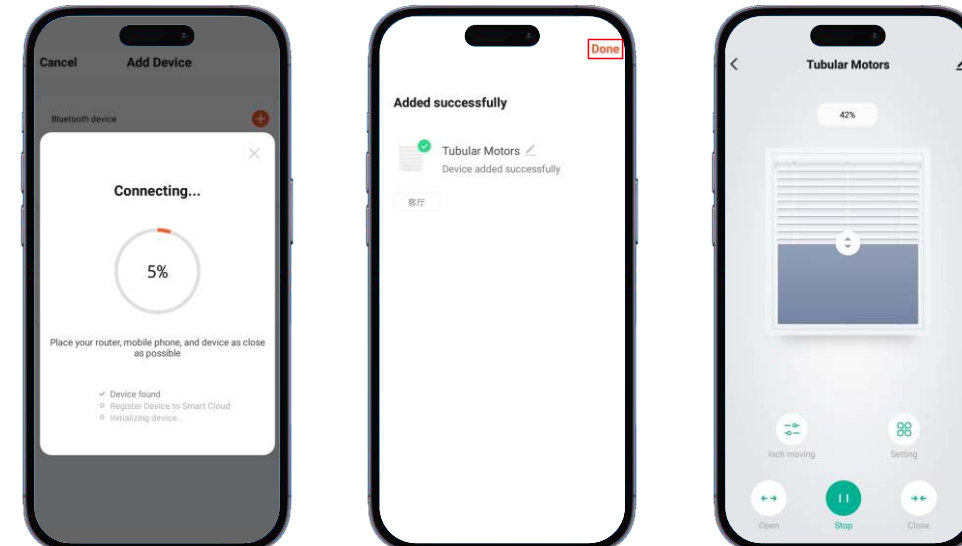

04. Waiting for connecting.

05. After added successfully, click "done"

06. Operation interface

Upper limit/down limit/ third position setting: It refers to the highest/lowest position that can be reached when the blinds moves up/down.

Kind tips ▲

Upper and down limit settings:

· Confirm the opening/closing direction, press the [Open] to run the blinds upward, press the [Close] to run the curtain downward; if the direction is opposite, please refer to the reversing function to reset

When setting or deleting the upper or down limit, the third position will be deleted

Third position Settings:

· Third position cannot be set near the [upper limit] or [down limit]


Third position Delete:

· Only when the blinds run to the third position, the third position can be deleted.


Reverse direction

Facing the blinds when installing, it is [Forward] when the motor [Setting key] is on the right hand side; it is [Reverse] when on the left hand side

Upper limit/Down limit/Third position setting method

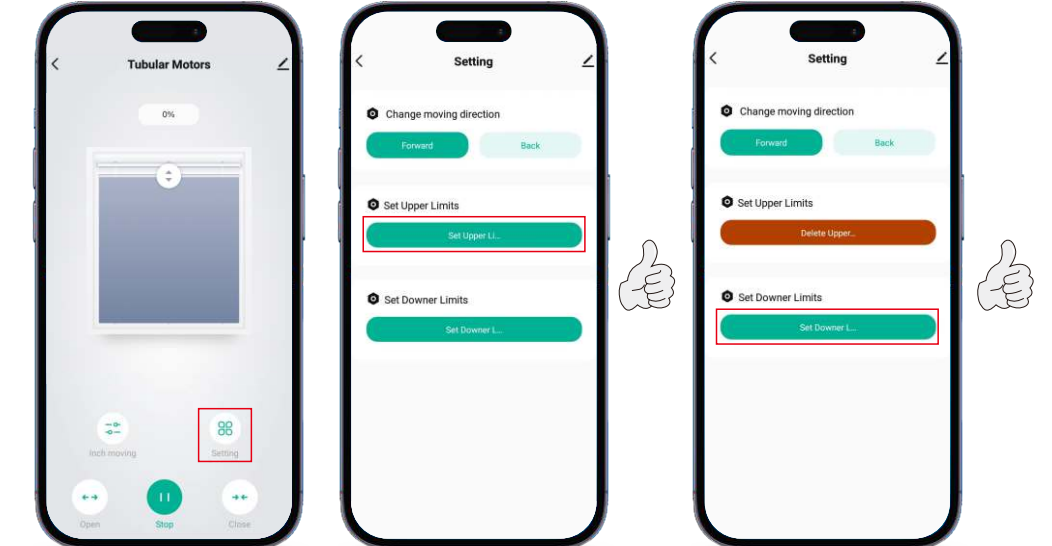

Third position setting method

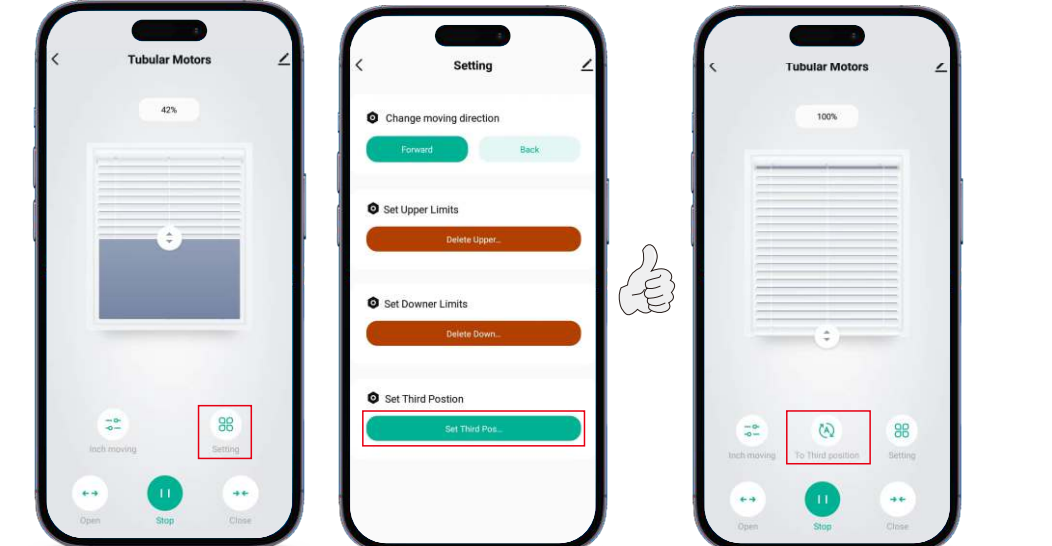

01. Press [open] or [close], when the blinds moves to the favorite position, press [stop], then press [Setting].

02. Press [set third position], the blinds will run up and down for 1s each, setting is successful.

03. After the setting is completed, you can see the "third position" icon.