 


K25-3E系列管状电机-NTY-说明书

公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。 A/1 H12136

电动卷帘机构图

 
注:带“*”号的是非电机标配部件(可订制零件)

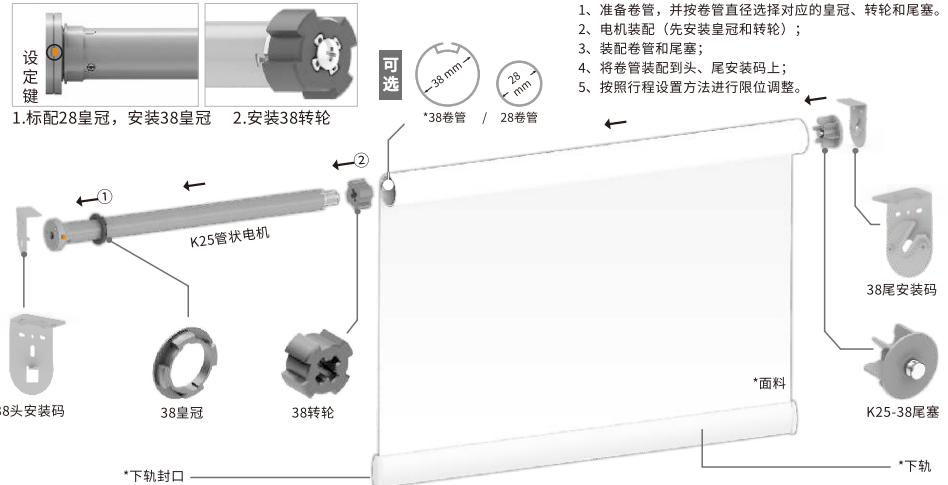


操作说明

(*以A13按键发射器为例进行说明,其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即会消除当前码。一台电机最多存5个遥控码,再增加遥控器只会覆盖第一个;

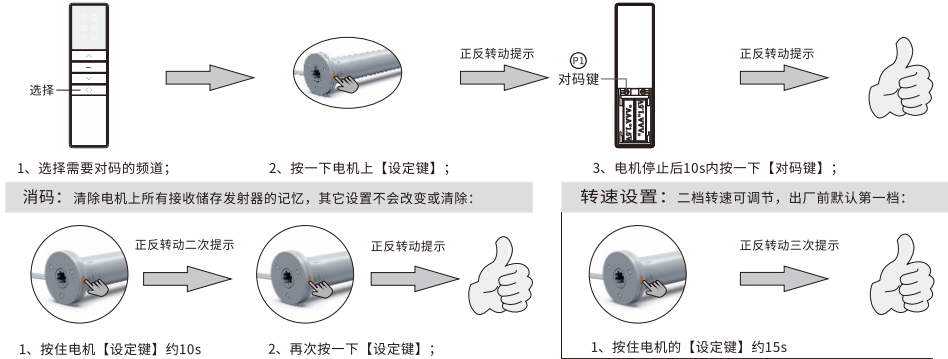

 
点动/连动模式互换: 电机出厂默认为连动模式,切换为点动模式后,长按住【上行键】或【下行键】约2s电机一直连动运转;

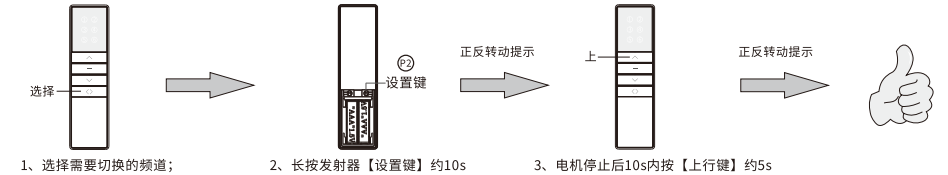



复制: 为已经对码的电机新增一个B发射器:

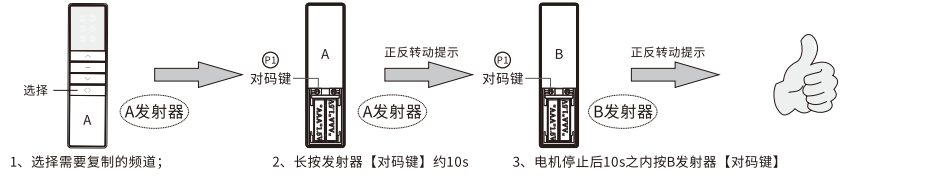 

 
换向: 切换已对上码电机运转方向。如: 换向前,按发射器上行键,窗帘往下运行; 换向后,按发射器上行键,窗帘往上运行:

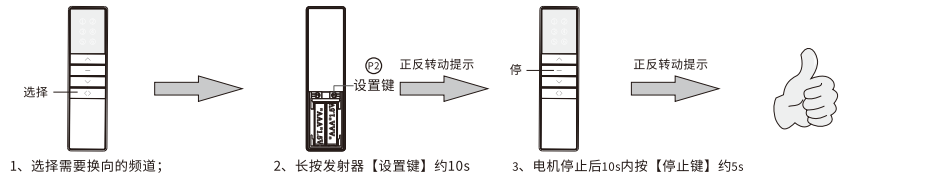

  
上限位/下限位设置: 指按发射器【上行键或下行键】时,窗帘向上/向下运行,所能到达的理想最高/最低位置。

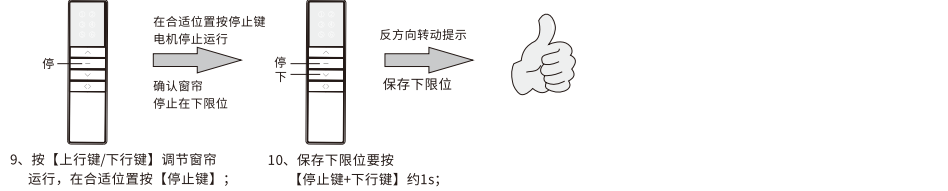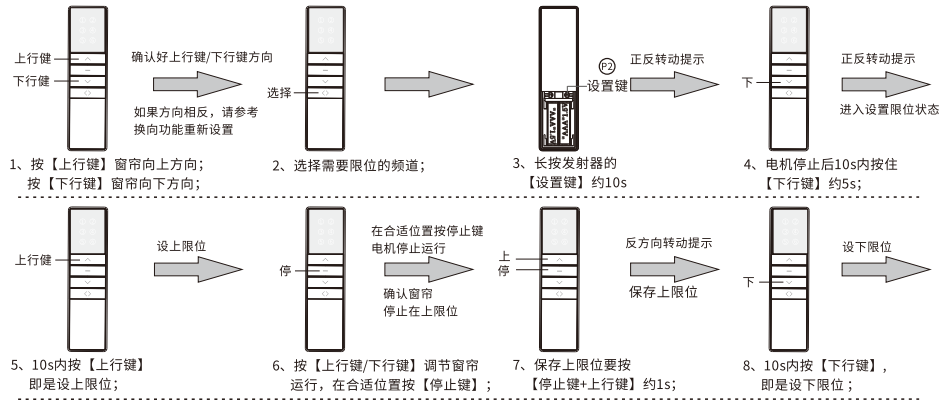


喜爱位置设置: 窗帘运行到喜爱位置,重复操作可删除喜爱位置:

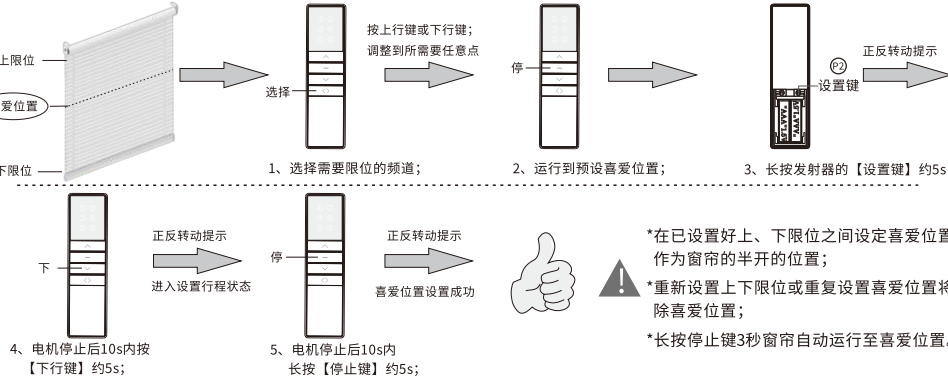 

wifi 恢复出厂设置方法:

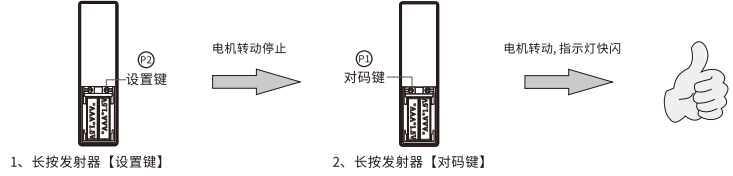 

APP配网方法:

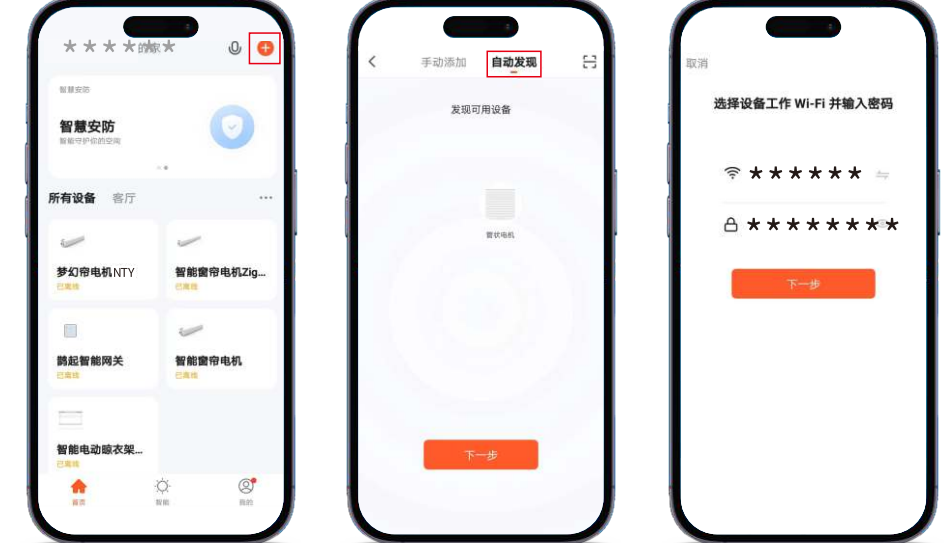 


上限位/下限位/喜爱位置设置: 指按APP【开启】键或者【关闭】键时,窗帘向上/向下运行,所能到达的最高/最低位置。

温馨提示
上下限位设置:
· 确认好开启/关闭方向, 按【开启】键窗帘向上运行, 按【关闭】键窗帘向下运行; 如果方向相反, 请参考换向功能重新设置
· 设置或删除上、下限位时, 喜爱位置将会被删除
喜爱位置设置:
· 当设置喜爱位置时, 窗帘行程点无法设置在【上限位】或者【下限位】附近
· 当窗帘运行到喜爱位置时, 方可删除喜爱位置。(其他位置无法删除)
电机反向:
· 安装时面向窗帘, 电机【设定键】在右边边设置为【正向】; 在左边边设置为【反向】

上限位/下限位设置方法




 喜爱位置设置方法

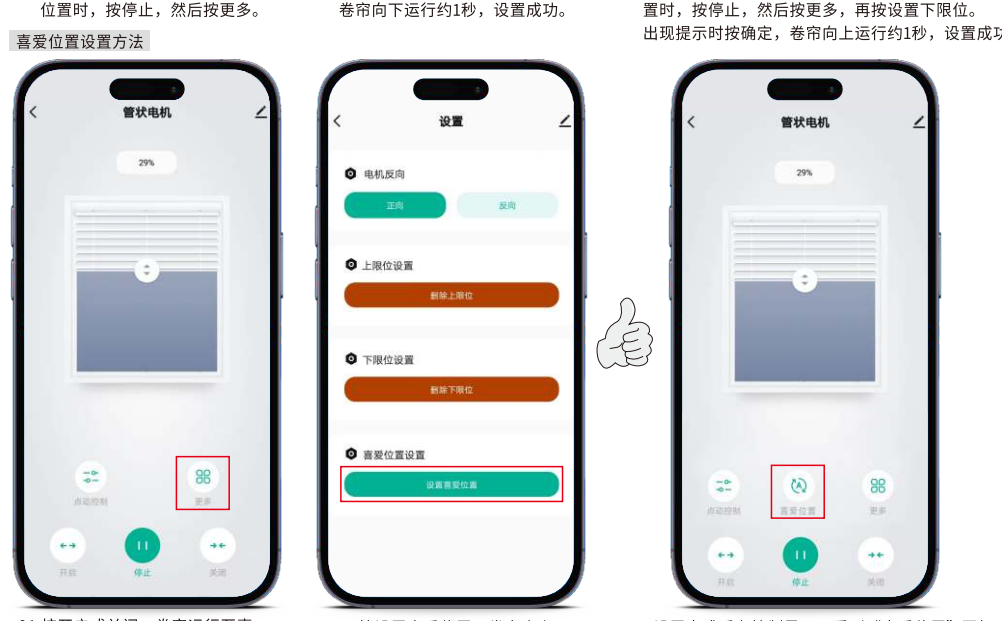

K25-3E Tubular Motor NTY Operating Manual

 
E Electric roller blind draft

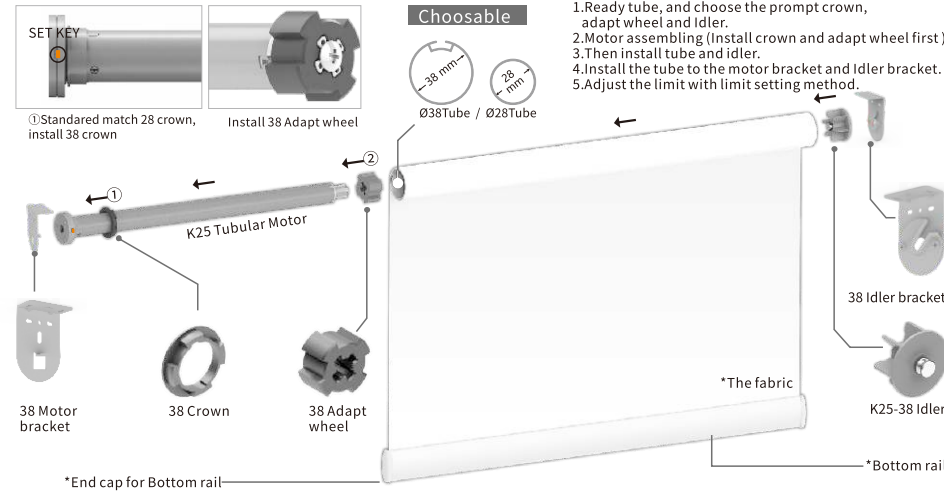


T Transmitter operating instructions

(*Take A13 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)

 
Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

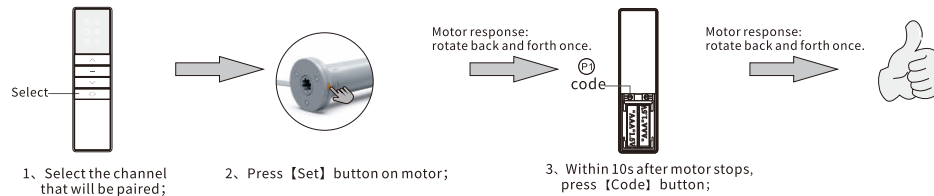

 
Clear pairing : Clear all pairing on the motor:

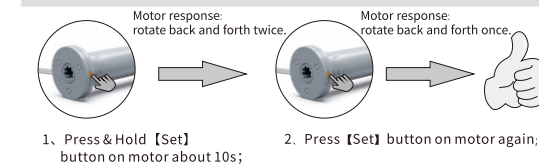


 
Speed setting : Two speed can be adjusted, Default is first:

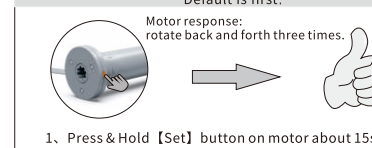



 
Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

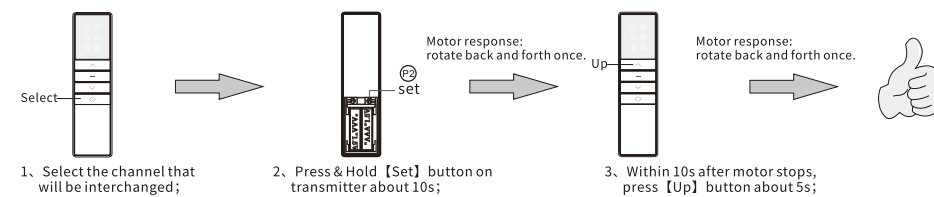

 
 
Copy: Add a new channel to control motor. (No need to touch motor):

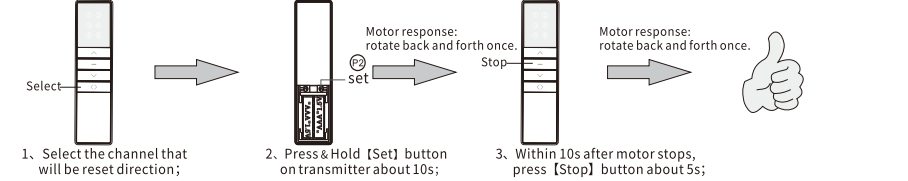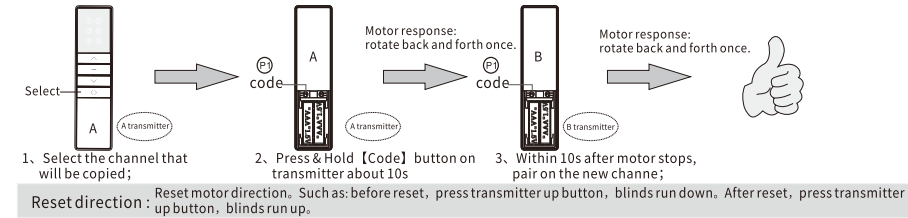

   
Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

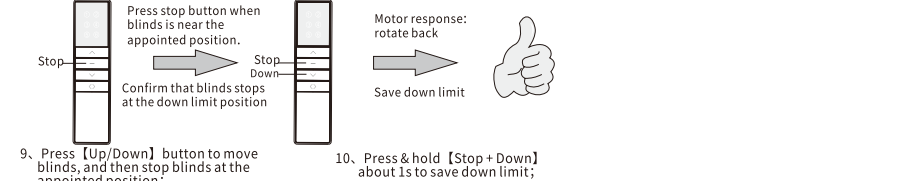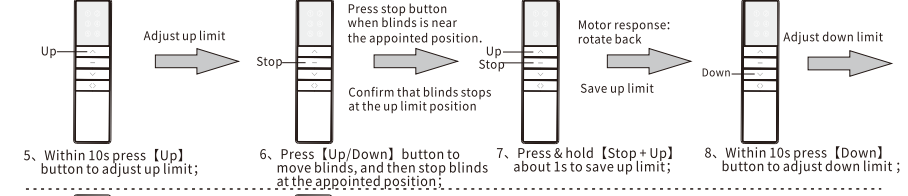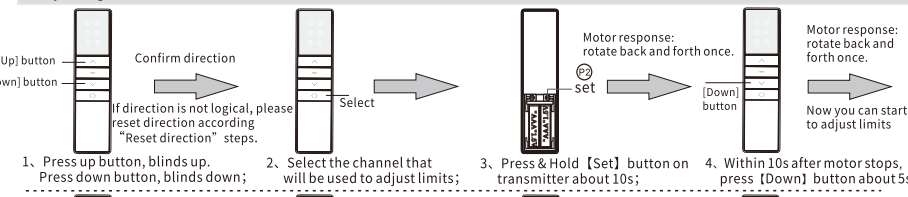

 
 
Third position set: move the blinds to third position, then repeat the operation once to delete the third position.

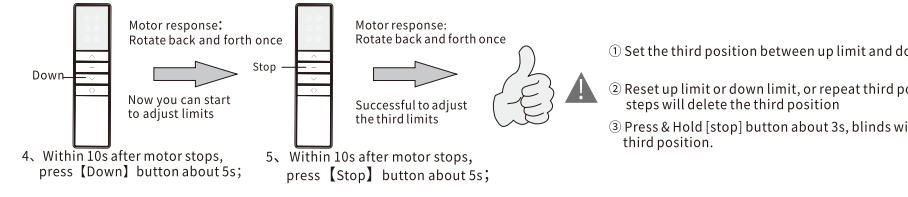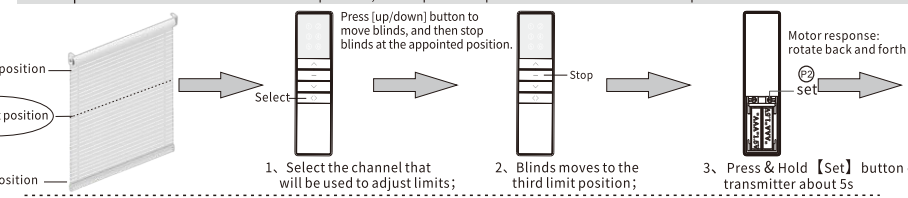

Reset Wi-Fi:

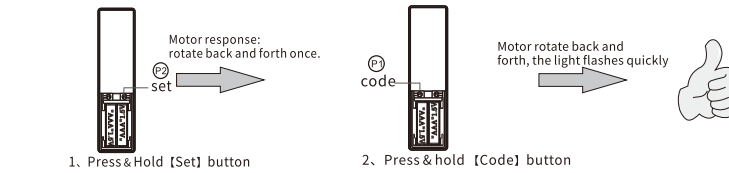 


Configure network method:

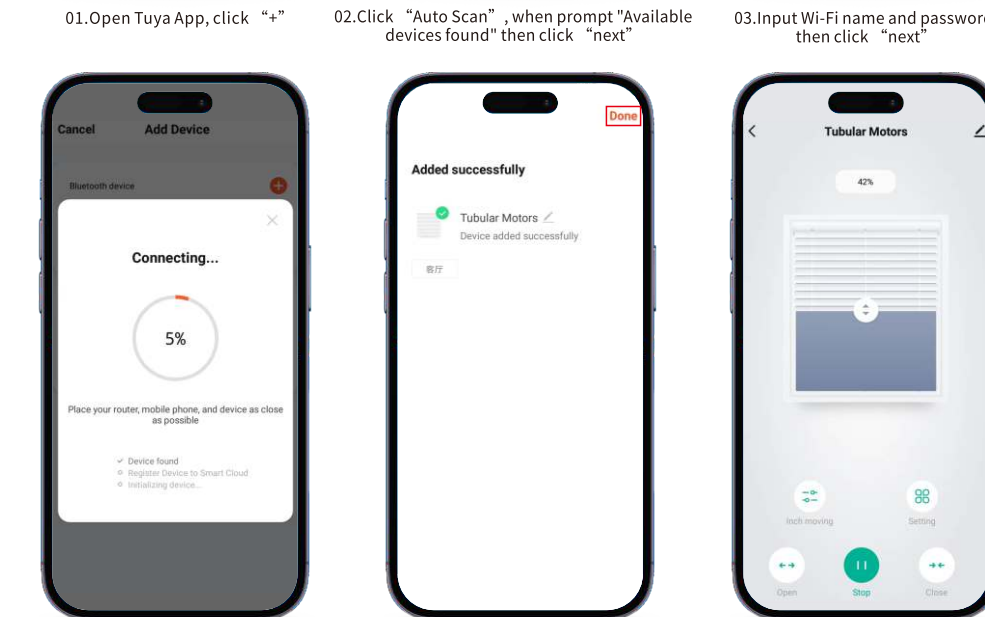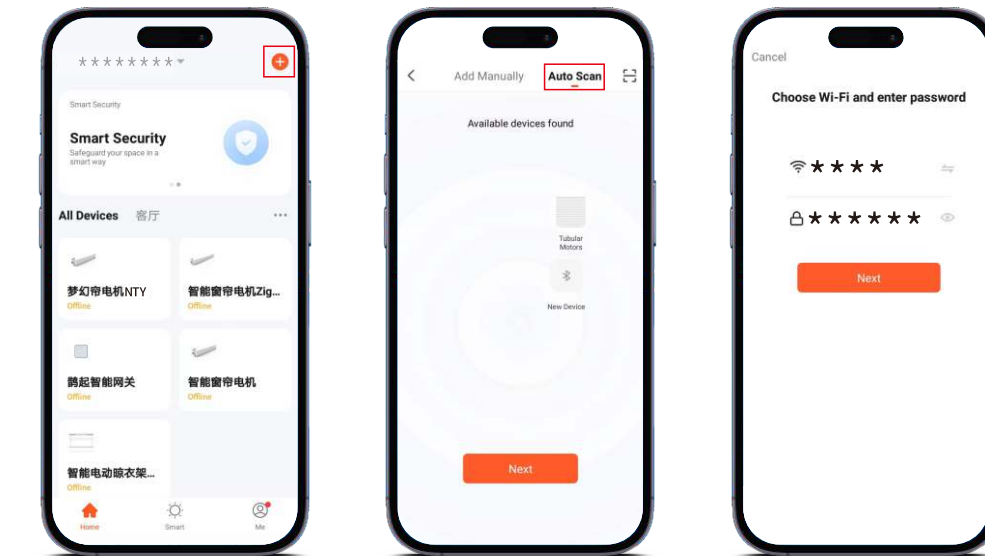  

Upper limit/down limit/ third position setting: It refers to the highest/lowest position that can be reached when the blinds moves up/down.

Kind tips
Upper and down limit settings:
- Confirm the opening/closing direction, press the [Open] to run the blinds upward, press the [Close] to run the curtain downward; if the direction is opposite, please refer to the reversing function to reset
When setting or deleting the upper or down limit, the third position will be deleted
Third position Settings:
- Third position cannot be set near the [upper limit] or [down limit]
Third position Delete:
- Only when the blinds run to the third position, the third position can be deleted.
Reverse direction
Facing the blinds when installing, it is [Forward] when the motor [Setting key] is on the right hand side; it is [Reverse] when on the left hand side

 Upper limit/Down limit/Third position setting method

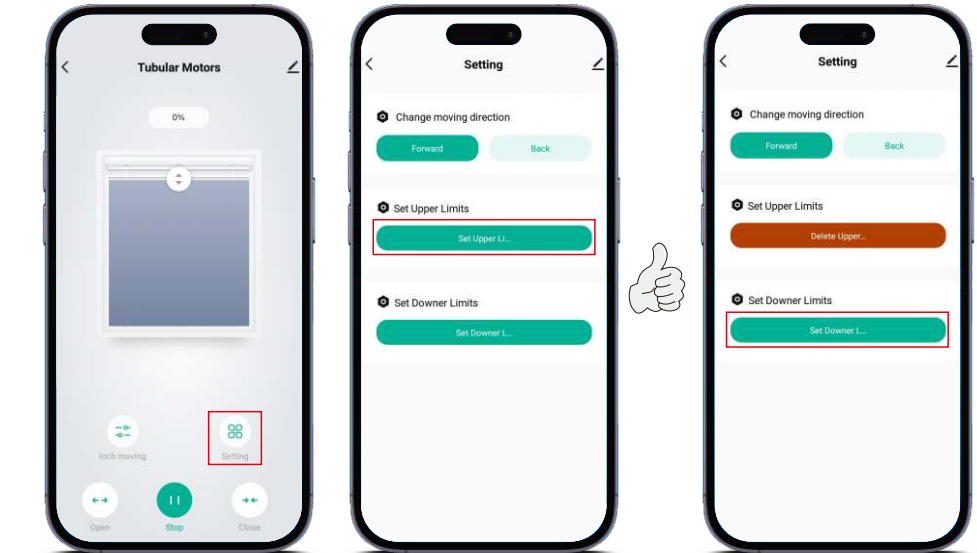

Third position setting method

