


E24 In-bulit single end venetian motor specification

E24-EL-SA-1.3

Build-in wireless control system Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12010 A/6

 
Electric venetian blind draft

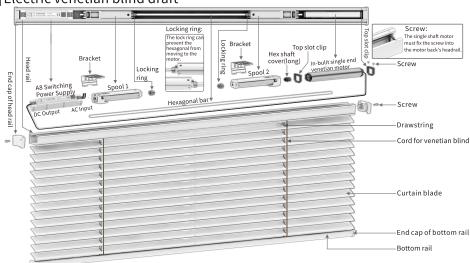

Instructions

(*Take A3 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)

Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 10 transmitter Pairing transmitter and motor: channels, Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1~10. If you add channel 11, paired channels will be 2~11.




Clear pairing: Clear all pairing on the motor:



1、Press & Hold【Set】

2, Press [Set] button on motor again;

 Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:



2、Press & Hold [Set] button on 3、Within 10s after motor stops, will be interchanged; transmitter about 10s; press [Up] button about 5s;

 
Copy: Add a new channel to control motor. (No need to touch motor):



1、Select the channel that will be copied;

- 2、Press & Hold【Code】 button on transmitter about 10s
- 3、Within 10s after motor stops, pair on the new channe;


 $Reset \, motor \, direction. Such \, as: \, before \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset, \, \, press \, transmitter \, up \, button, \, \, blinds \, run \, down. \, After \, reset,$



1、Select the channel that will be reset direction;


- 2. Press&Hold [Set] button on transmitter about 10s
- 3、Within 10s after motor stops, press [Stop] button about 5s;

 Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position



1. Press up button, blinds up. Press down button, blinds down;

 
- 2、Select the channel that will be used to adjust limits; transmitter about 10s;
- 3、Press & Hold [Set] button on 4、Within 10s after motor stops, press [Down] button about 5s;



5、Within 10s press [Up] button to adjust up limit;

- 6、Press [Up/Down] button to move blinds, and then stop blinds at the appointed position;
- 7、Press & hold [Stop + Up] about 1s to save up limit;
- 8、Within 10s press [Down] button to adjust down limit;

 Adjust down limit



9、Press [Up/Down] button to move blinds, and then stop blinds at the appointed position;

10、Press & hold [Stop + Down] about 1s to save down limit:

Speed setting: Two speed can be adjusted, Default is first:



1、Press & Hold 【Set】 button on motor about 15s;