


A13-6频LED开合帘发射器说明书

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。

A/O H12213

按键功能说明：

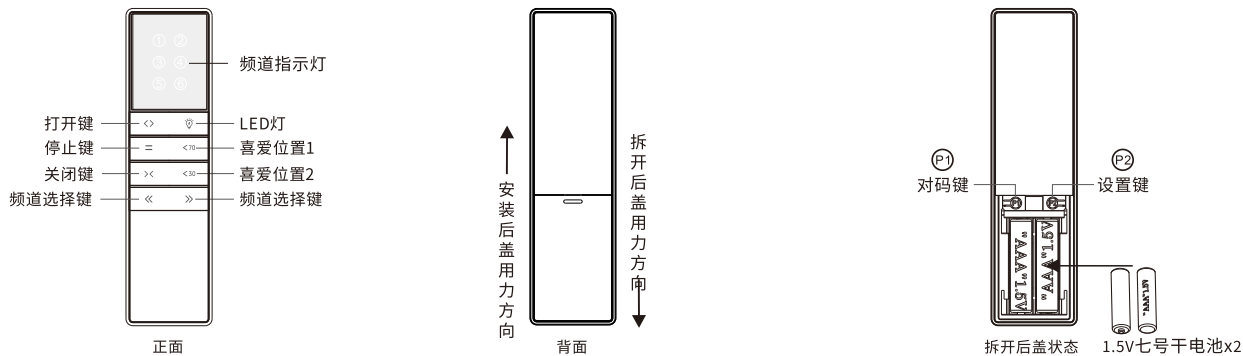

对码：

重复操作对码步骤即是消除当前码：



复制：

为已经对码的电机新增一个发射器：



换向：

切换已对上码电机运转方向。如：换向前，按发射器打开键，窗帘关闭,则需要换向设置：



行程取消：



氛围灯设置：

电机运行时自动打开氛围灯，重复操作即关闭和打开相互切换，关闭后按“开灯”键才可以打开氛围灯：



面料反弹方向和启用面料反弹设定：




A13-6 channel LED curtain motor transmitter instructions

Company reserves the right to change product design and specifications without prior notice then ,photos are for reference only.


A/0 H12213

Button function specifications

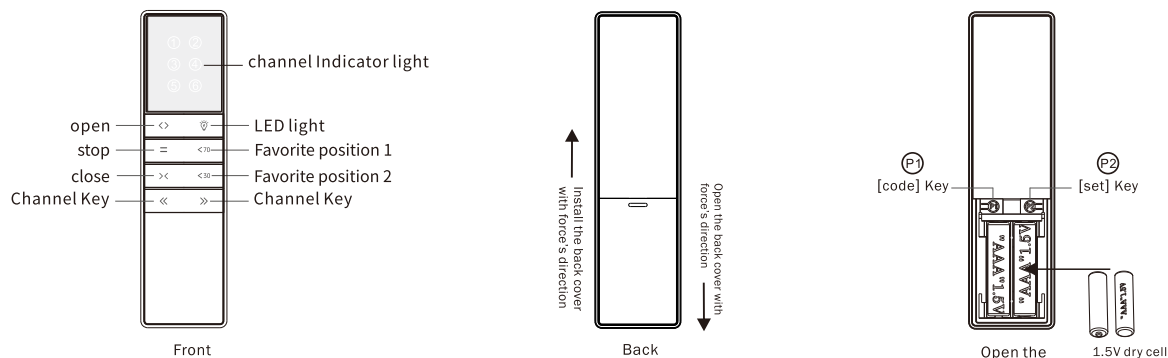


Pairing transmitter and motor

Repeat the steps to clean current pairing

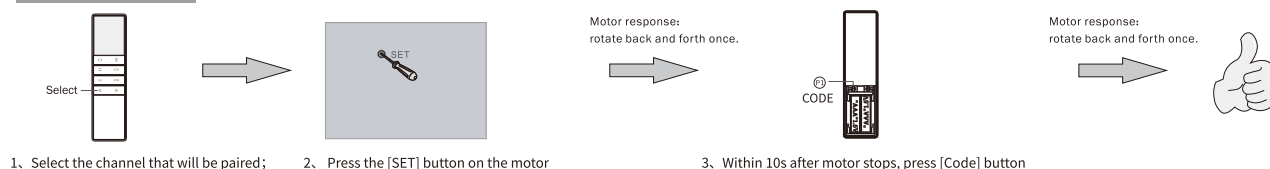


copy add a new channel to control motor. (No need to touch motor)

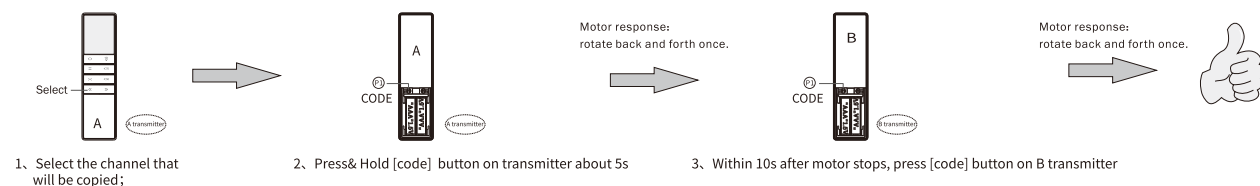


Reset direction

Reset motor direction. Such as: before reset, press transmitter up button, blinds runs down. After reset, press transmitter up button, blinds runs up.

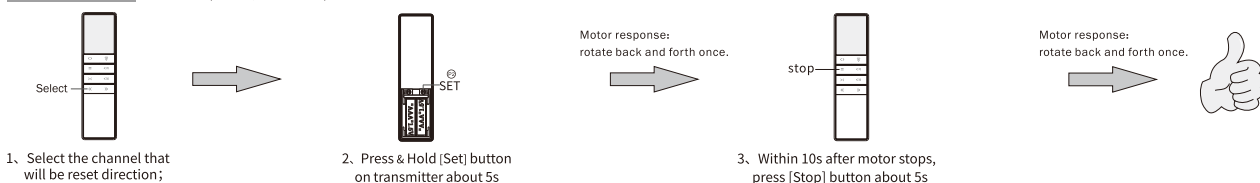


Cancel limit

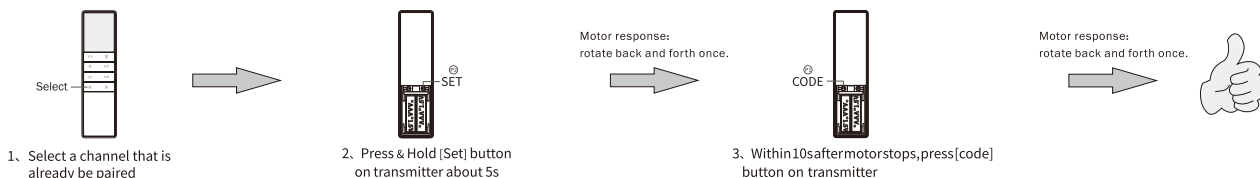

Ambient light setting

Default: ambient light is automatically turned on when motor is running. After below setting, light will not turn on when motor is running. Repeat the setting, it will turn on when motor is running. When light off, press the "On Light" button of remote to turn on the light.

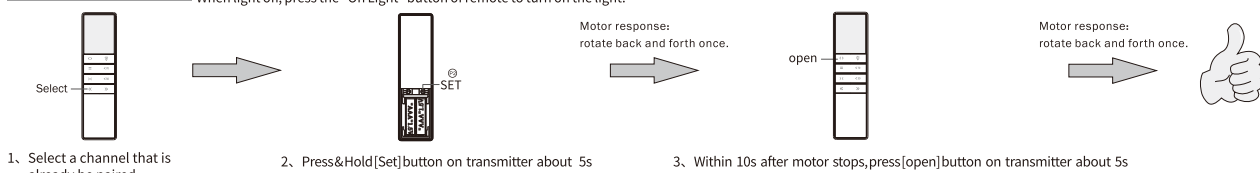

Fabric rebound location exchange setting

