


A3-5锁频发射器说明书

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。

A/2 H12088

按键功能说明

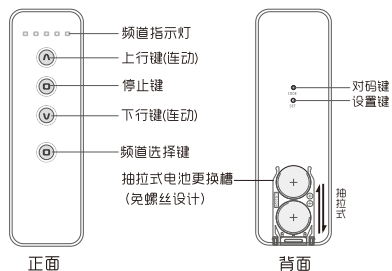

正常模式

按发射器的【上行键】【停止键】【下行键】三个按键可以对电机作相应操控。无操作10s后发射器会自动处于休眠状态，以延长电池的使用寿命。

频道选择

按发射器的下方的【频道选择键】频道指示灯从左向右依次点亮。移至所选频道时，指示灯点亮的即为选定的频道。

群控功能

单个指示灯亮标示当前使用的遥控频道，当频道指示灯全部亮时即为群控。


更换电池

发射器使用3V钮扣电池，更换电池方法：抽出电池仓盖，可见电池位置，正确装入电池后，装好电池仓盖，遥控器进入正常工作状态。


注：发射器电池正常使用一年以上。

发射器操作说明 (*以E24-EL-SA-1 百叶电机为例进行说明，其它请参考相应的说明书。)


对码：重复操作对码步骤即是消除当前码。一台电机最多储存5个发射通道，再增加新发射通道只会循环覆盖最前一个通道：

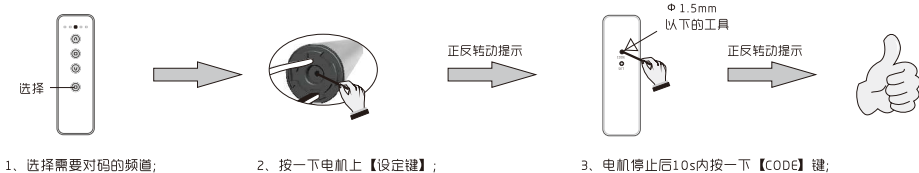


消码：清除电机上所有接收储存发射器的记忆，其它设置不会改变或清除：

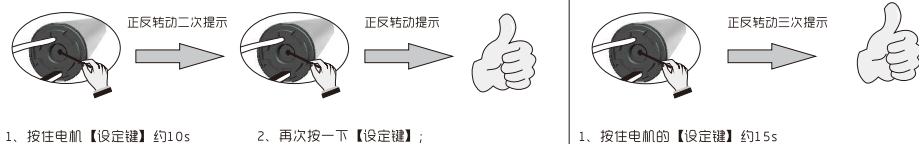


转速设置：二档转速可调节，出厂默认第一档：

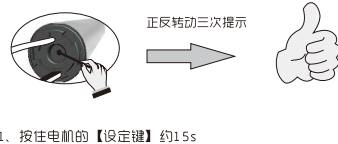


锁频设置：

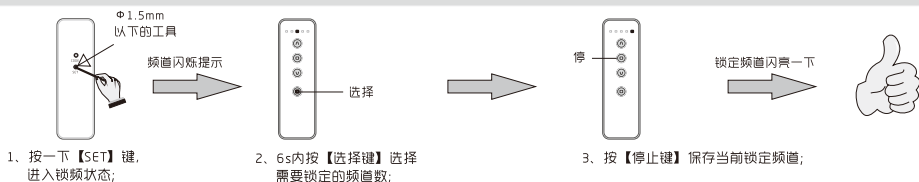


点动/连动模式互换：电机出厂默认为连动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机合一直连动运转：

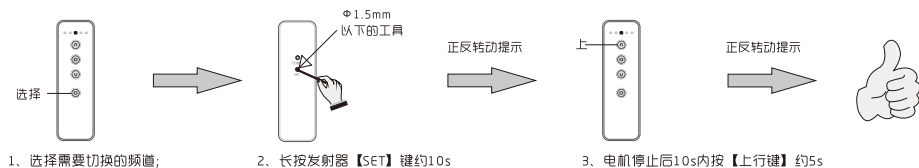


复制：为已经对码的电机新增一个发射器：

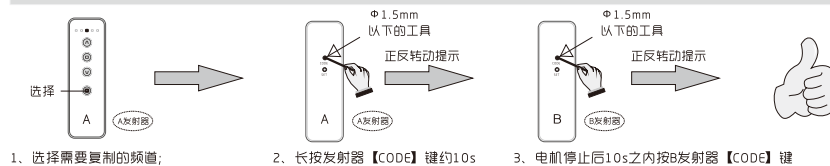


换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行：

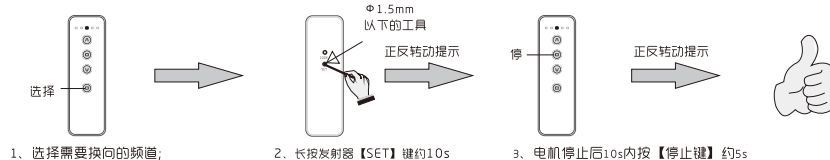

上、下行程设置：指按发射器【上行键或下行键】时，窗帘向上/向下运行，所能到达的理想最高/最低位置。

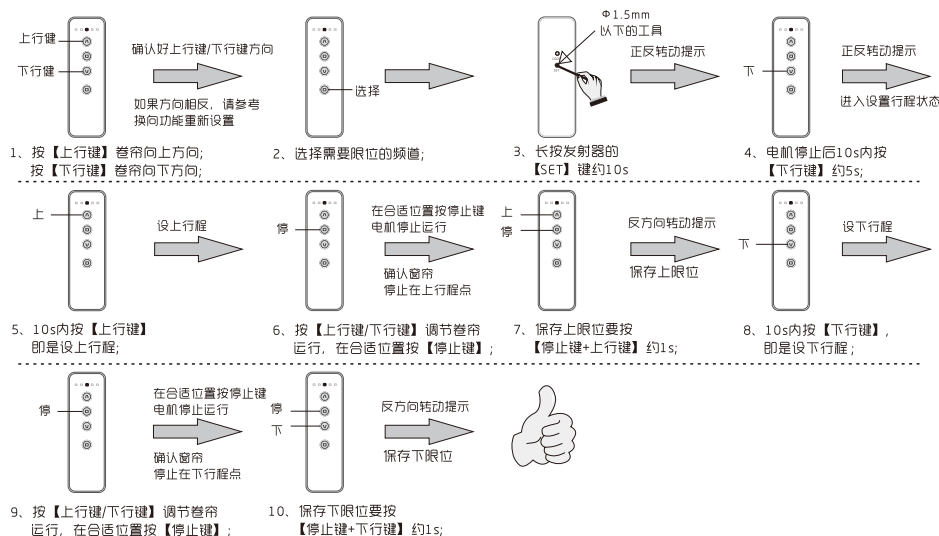

第三行程设置：重复操作设置将会取消第三行程点：

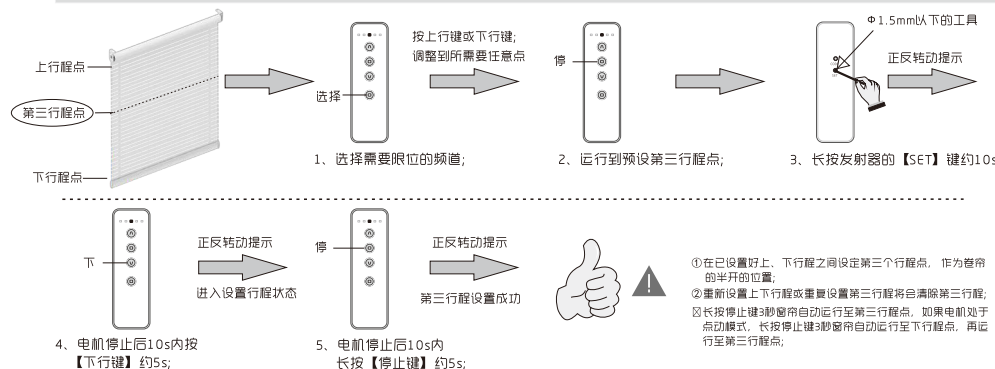


A3-5 lock-channel transmitter specification

Company reserves the right to change product design and specifications without prior notice then , photos are for reference only.

A/2 H12088

B Button function specifications

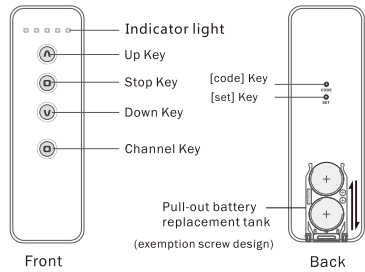

Normal mode

Press the [Up Key] [Stop Key] [Down Key] on the transmitter can control the motor accordingly. Loosen over 10s , the transmitter will power off automatically, this can lengthen the life of the battery.

Choose channels

Press the [Channel Key] on the transmitter , make the indicator light move from left to right. You can control the motor when the light moves to the required control channel.

Group control function

Each channel light stand for relevant channel , When the indicator light all bright is the group control.

Replace battery

Transmitter use 3V button cell, way to replace the battery : Pull out battery cover, the battery location bin can be seen, put the battery correctly ,then close the battery location bin, remote control can be in normal operation condition.


Note: The transmitter battery is normally used for more than one year.

T Transmitter operating instructions

(Take E24-EL-SA-1 Venetian motor as an example. For others, please refer to the corresponding manual)


Pairing transmitter and motor :

Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 5 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1~5. If you add channel 6, paired channels will be 2~6. :

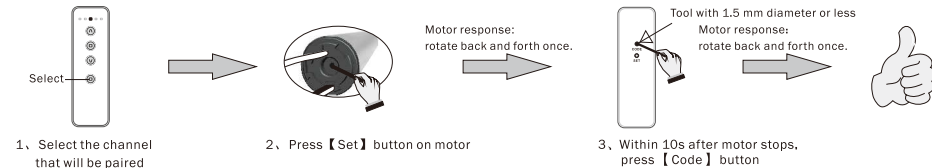


Clear pairing :

Clear all pairing on the motor

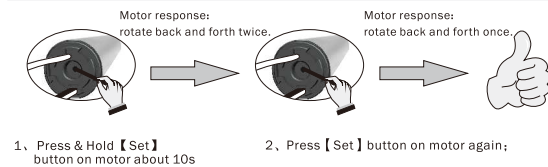


Speed setting :

Two speed can be adjusted, Default is first;

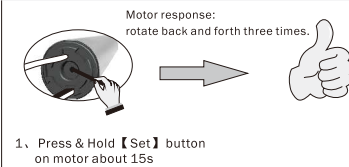


lock channel setting:

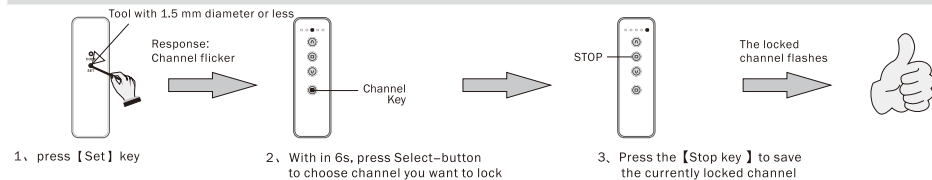


Inching / Continuous moving interchange :

Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves;

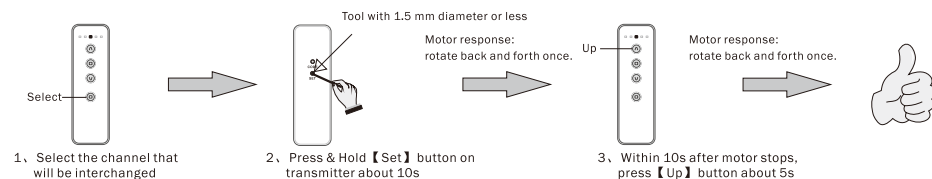


Copy :

Add a new channel to control motor. (No need to touch motor);

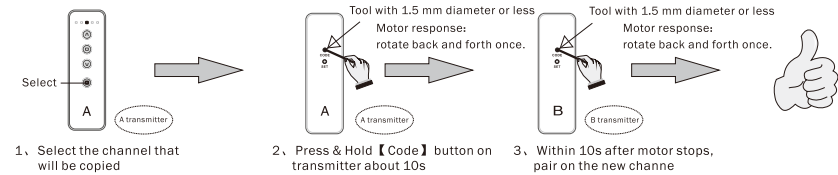


Reset direction :

Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

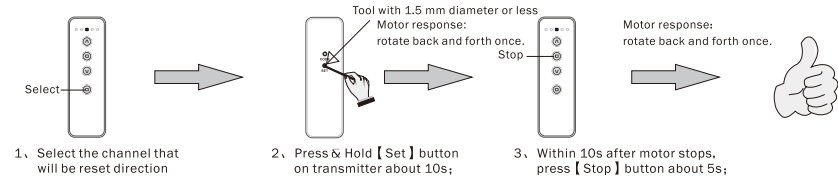


Adjusting Limits :

When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

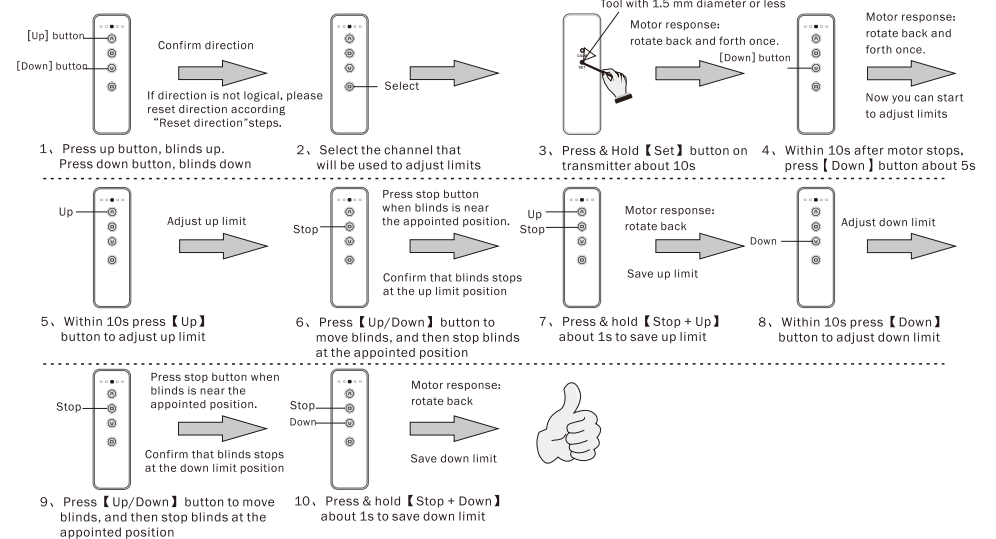

Adjust the third limit :

Repeat the operation once to eliminate the third limit;

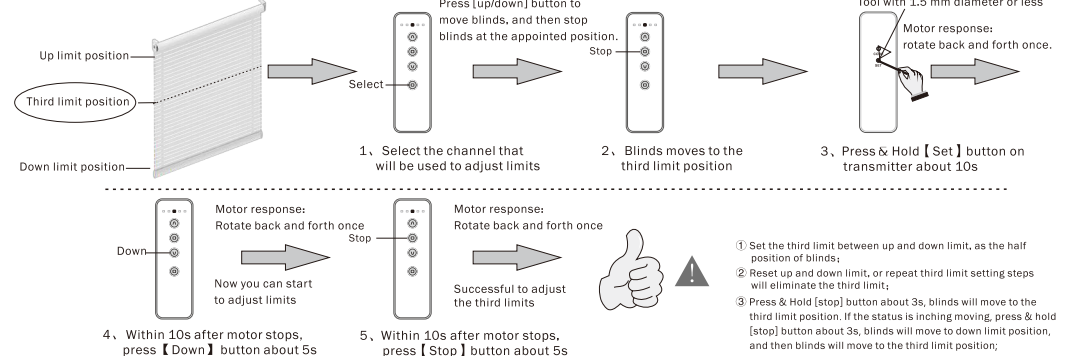

1. Set the third limit between up and down limit, as the half position of blinds;
2. Reset up and down limit, or repeat third limit setting steps will eliminate the third limit;
3. Press & Hold [stop] button about 3s, blinds will move to the third limit position. If the status is inching moving, press & hold [stop] button about 3s, blinds will move to down limit position, and then blinds will move to the third limit position;