

A8接收器使用说明书


公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。

A/2 H71237


产品特性

A8控制接收器通过868MHz/433MHz的无线射频传送，接收距离可达100米以上(可视)，穿隔两面加固混凝土墙至少30米。868MHz/433MHz频率在无线通信中有抗干扰能力强、接收灵敏度高、中心频率稳定、调试方便等特点。

接收器示意图

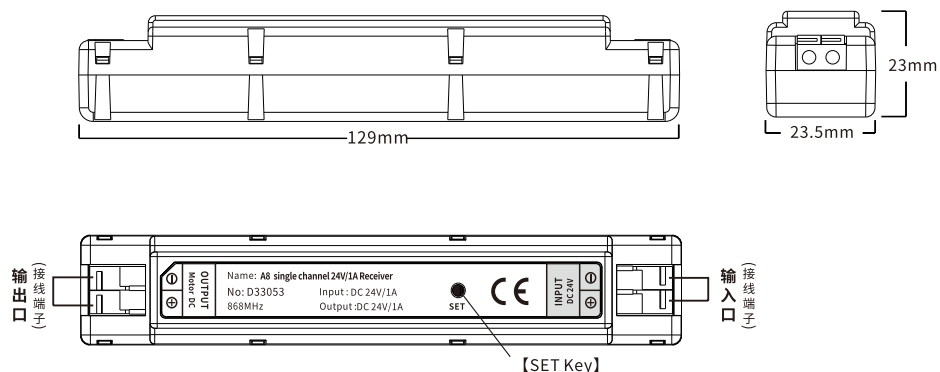


接收器和发射器面板按键说明

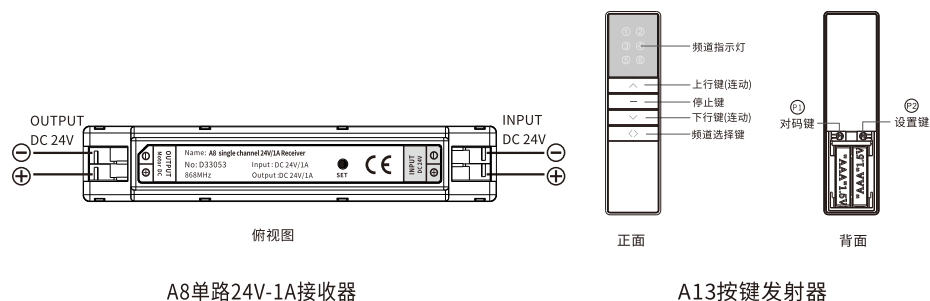


操作说明（*以A3按键发射器为例进行说明，其它发射器请参考相应的发射器说明书。）


对码：重复操作对码步骤即是消除当前码。一台电机最多储存10个发射通道，再增加新发射通道只会循环覆盖最后一个通道：

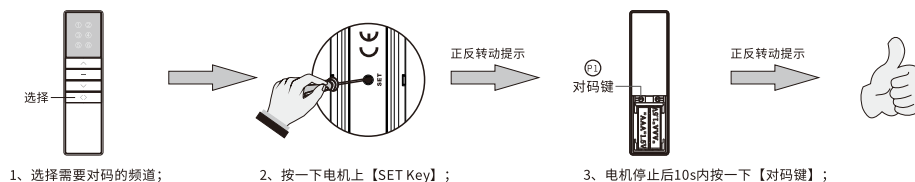


消码：清除接收器上所有储存发射器的记忆，其它设置不会改变或清除：

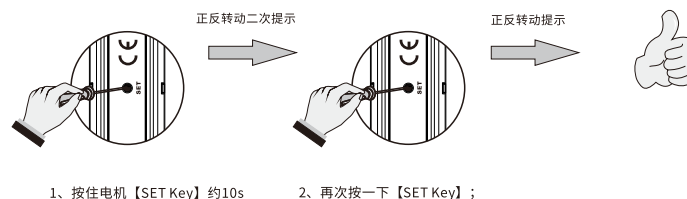


复制：为已经对码的电机新增加一个发射器：

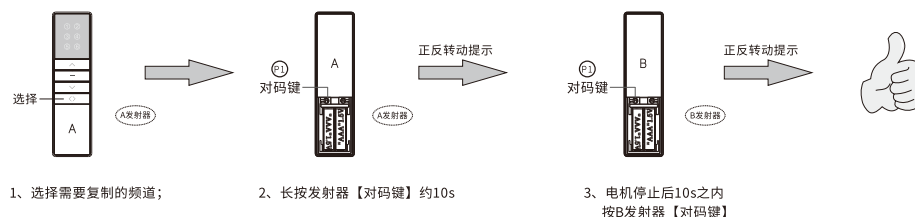

换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行：

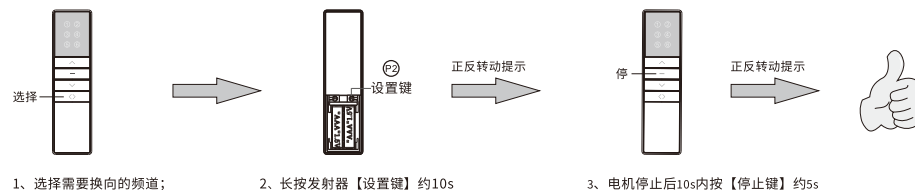

点动/连动模式互换：电机出厂默认认为连动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机会一直连动运行：

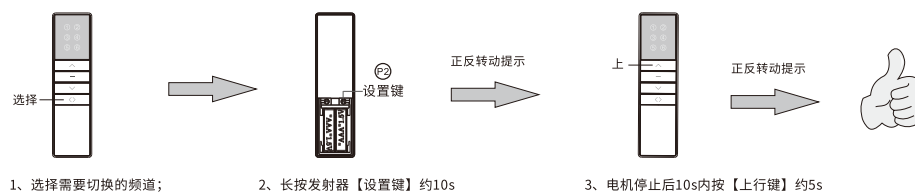

A8 Receiver Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only.


A/2 H71237

Product Features


A8 receiver works with 868MHz / 433MHz radio frequency. Receiving distance is up to 100 meters (visual), at least 30 meters if through two sides of reinforced concrete wall.

In wireless communication, 868MHz / 433MHz frequency is with strong anti-interference ability, high reception sensitivity, center frequency stability, easy debugging and so on.

Wire diagram

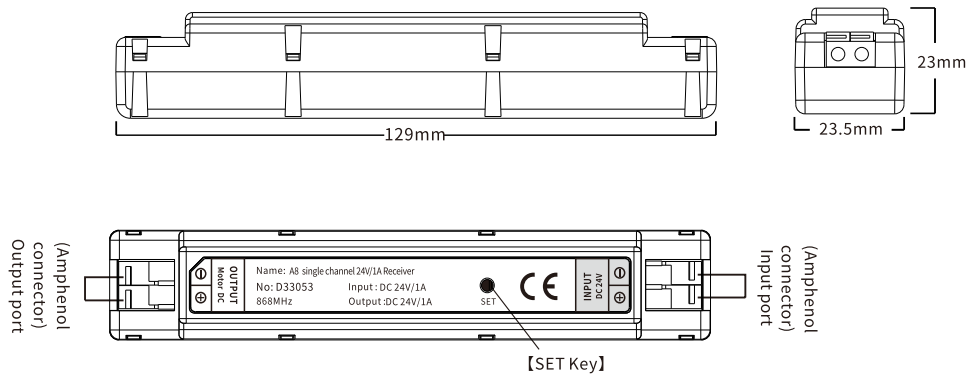

Receiver and transmitter panel key

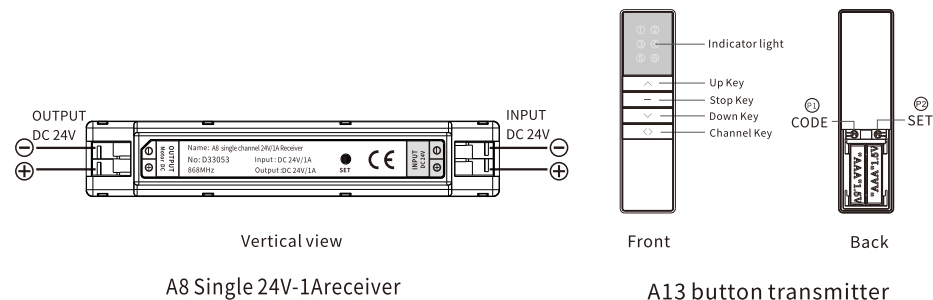


Instructions


(*Take A3 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)

Pairing transmitter and motor:


Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 10 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1~10. If you add channel 11, paired channels will be 2~11. :

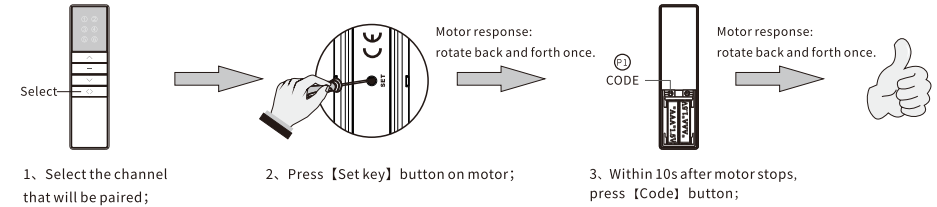


Clear pairing : Clear all pairing on the receiver, Other settings will not be changed or cleared:

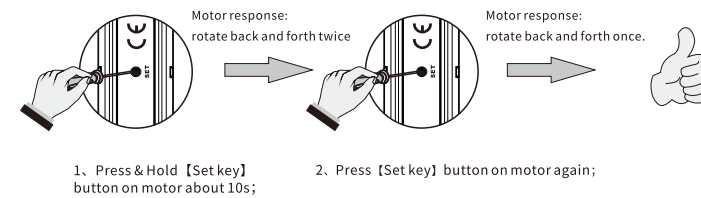

Copy: Add a new channel to control motor. (No need to touch motor):

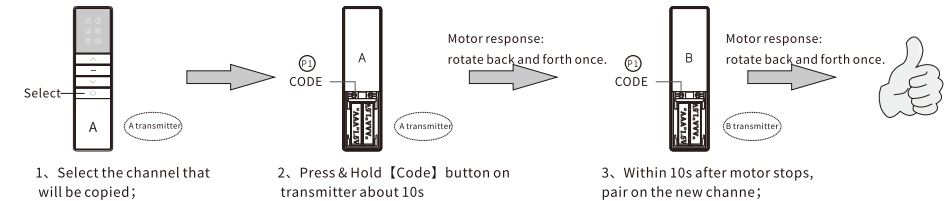

Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

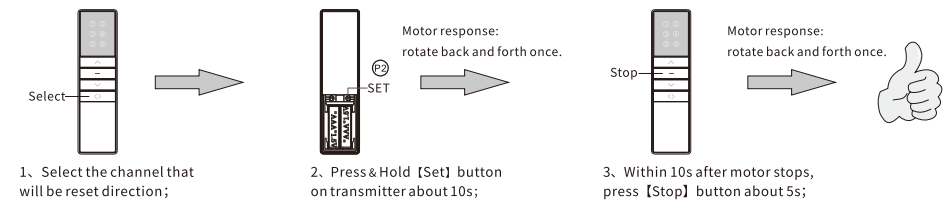

Inching / Continuous moving interchange : Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

