

N31-3E-1.8-LED Color-Change Curtain Motor

English Voice Control -Hello Iris-V1.4

Company reserves the right to change product design and specifications without prior notice then ,photos are for reference only.

A/0 H12216

NO.	Wake-up words	Explanation	Motor broadcast content	Control command and Motor broadcast
	Hello Iris	Default wake-up word (always effective)		
1	Living room curtains	Optional Wake-up Words List (need to set as setps 11 "set wake-up word")	I'm here (voice mode) or Ding (beep mode) (need to set as setps 9 "set working mode")	Open curtains (OK, the curtains are open or Ding) Stop curtains (OK, the curtains are stopped or Ding) Close curtains (OK, the curtains are closed or Ding)
	Dining room curtains			
	Balcony curtains			
	Bedroom curtains			
	Left curtains			
	Middle curtains			
	Right curtains			
	Curtains 1			
	Curtains 2			
2	Living room sheers	Optional Wake-up words list (need to set as setps 11 "set wake-up word")	I'm here (voice mode) or Ding (beep mode) (need to set as setps 9 "set working mode")	Open sheers (OK, open the sheers or Ding) Stop sheers (OK, stop the sheers or Ding) Close sheers (OK, close the sheers or Ding)
	Dining room sheers			
	Balcony sheers			
	Bedroom sheers			
	Left sheers			
	Middle sheers			
	Right sheers			
	Sheers 1			
	Sheers 2			
	Command	Explanation	Motor broadcast content	
3	Exit	Sleep (automatically Sleep If No Operation For 20 S)	I'm leaving, please wake me up when needed or Ding (beep mode)	
4	Delete limit		OK, limit has been deleted (no beep mode)	
5	Change direction		OK, direction has been changed (no beep mode)	
6	Turn on the (ambient) light		OK, the ambient light is on or Ding (beep mode)	
	Turn off the (ambient) light		OK, the ambient light is off or Ding (beep mode)	
7	Comfy mode	Change Light Color	OK, enter comfy mode or Ding (beep mode)	
	Passion mode		OK, enter passion mode or Ding (beep mode)	
	Romantic mode		OK, enter romantic mode or Ding (beep mode)	
8	Brighter	Change Light Brightness	OK, brighter (Already the brightest) or Ding (beep mode)	
	Darker		OK, darker (Already the darkest) or Ding (beep mode)	
9	Set working mode	Setting motor broadcast by voice or beep	please say the working mode you want to set. (no beep mode)	
	Beep mode		OK, working mode has been set to beep mode (no beep mode)	
	Voice mode		OK, working mode has been set to voice mode (no beep mode)	
10	Louder	Change volume	OK, louder (already the loudest) or Ding (beep mode)	
	Quieter		OK, quieter (already the quietest) or Ding (beep mode)	

NO.	Command	Explanation	Motor broadcast content (no beep mode)	
11	Set wake-up word	Choose wake-up word	OK, please say the word you want to set	
	Living room curtains	Optional wake-up words for curtains	OK, the wake-up word has been set as the living room curtains	
	Dining room curtains		OK, the wake-up word has been set as the dining room curtains	
	Balcony curtains		OK, the wake-up word has been set as the balcony curtain	
	Bedroom curtains		OK, the wake-up word has been set as the bedroom room curtains	
	Middle curtains		OK, the wake-up word has been set as the middle curtains	
	Right curtains		OK, the wake-up word has been set as the right curtains	
	Curtains 1		OK, the wake-up word has been set as the curtains 1	
	Curtains 2		OK, the wake-up word has been set as the curtains 2	
	Living room sheers	Optional Wake-up words For Sheers	OK, the wake-up word has been set as the living room sheers	
	Dining room sheers		OK, the wake-up word has been set as the dining room sheers	
	Balcony sheers		OK, the wake-up word has been set as the balcony sheers	
	Bedroom sheers		OK, the wake-up word has been set as the bedroom room sheers	
	Left sheers		OK, the wake-up word has been set as the left sheers	
	Middle sheers		OK, the wake-up word has been set as the middle sheers	
	Right sheers		OK, the wake-up word has been set as the right sheers	
	Sheers 1		OK, the wake-up word has been set as the sheers 1	
	Sheers 2		OK, the wake-up word has been set as the sheers 2	