


E24-3E天棚帘双电机III-说明书


公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。A/0 H12250

产品简介

E24-3E天棚帘双电机III

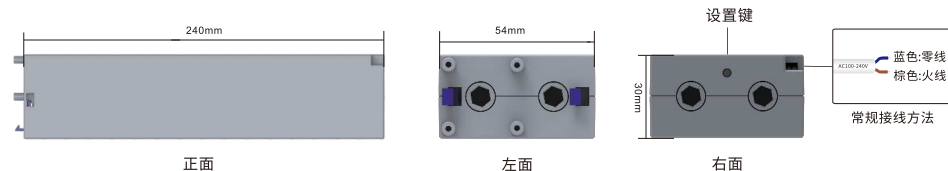


第三代日夜蜂巢天棚帘机构图

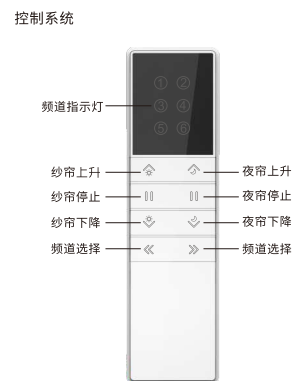

操作说明 (*以A13按键发射器为例进行说明，其它发射器请参考相应的发射器说明书。)

对码：重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码，再增加遥控器只会覆盖第一个：

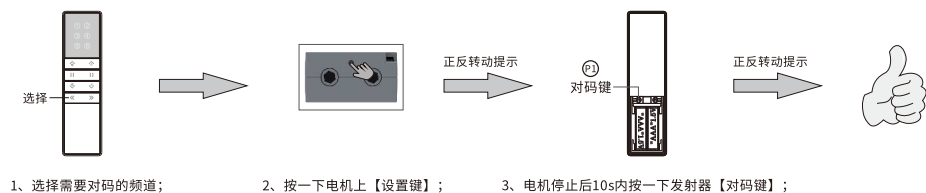


- 1、选择需要对码的频道；
- 2、按一下电机上【设置键】；
- 3、电机停止后10s内按一下发射器【对码键】；

复制：为已经对码的电机新增加一个B发射器：




- 1、选择已对上码的频道；
- 2、长按A发射器【对码键】；
- 3、电机停止后10s之内按B发射器【对码键】；

换向：切换已对上码电机运转方向。如:换向前，按发射器上行键，窗帘往下运行;换向后，按发射器上行键，窗帘往上运行:

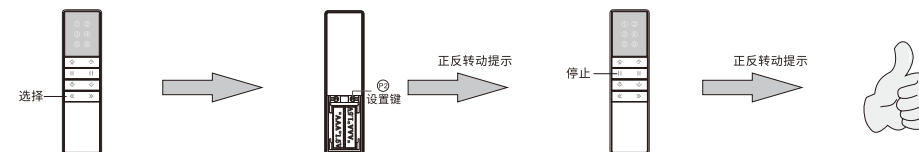


- 1、选择已对上码的频道；
- 2、长按发射器【设置键】约10S；
- 3、电机停止后10s内按【停止键】约5s

遥控设置行程：⚠️ 确保按键方向与轨道运行方向一致方可设置行程，若存在方向不一致则先执行换向操作：

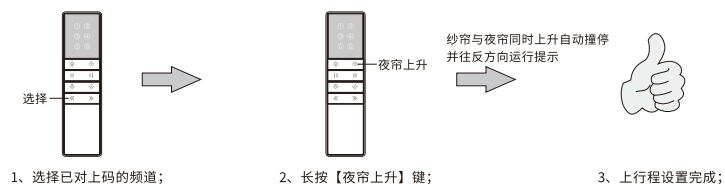


- 1、选择已对上码的频道；
- 2、长按【夜帘上升】键；
- 3、上行程设置完成；

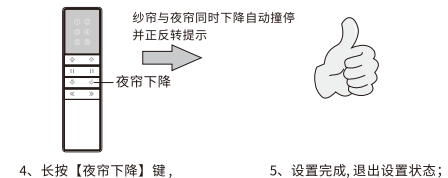


- 4、长按【夜帘下降】键，
- 5、设置完成,退出设置状态；

喜爱位置：定好上、下行程才有效：

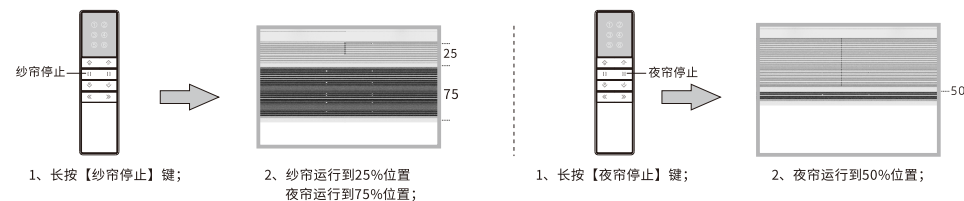


- 1、长按【纱帘停止】键；
- 2、纱帘运行到25%位置
夜帘运行到75%位置；
- 1、长按【夜帘停止】键；
- 2、夜帘运行到50%位置；

删除行程：

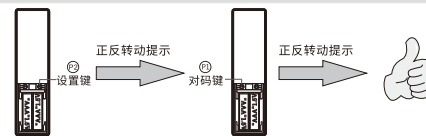

- 1、长按发射器【设置键】约5s
- 2、按一下发射器【对码键】

 恢复出厂设置：清除电机上所有接收储存发射器的记忆,包括清除行程：




- 1、长按电机【设置键】；
- 2、松开,再次按一下【设置键】；

E24-3E skylight Dual Motor III - Instruction Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. A/0 H12250


Product Introduction

E24-3E skylight motor III

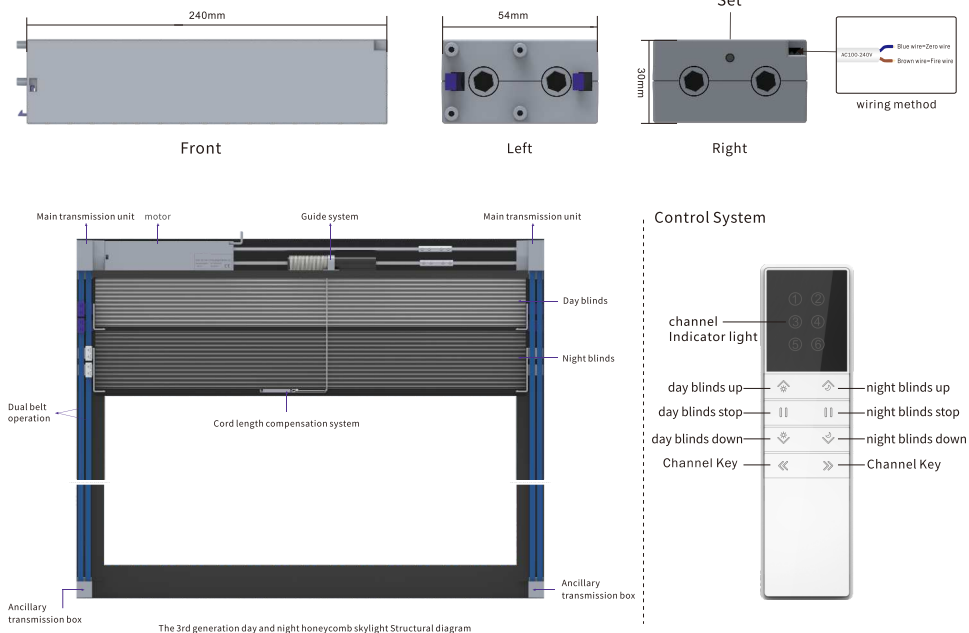


Instructions: (Take A13 button transmitter as an example, for other transmitters, please refer to the corresponding transmitter manual.)

Pairing transmitter and motor repeat the pairing operation once to eliminate the current pairing. A motor stores up to 5 transmitter channels, adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1-5. If you add channel 6, paired channels will be 2-6.

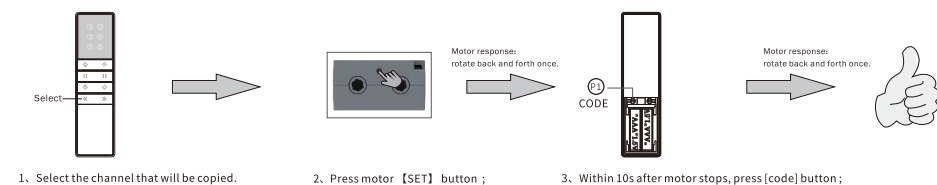


copy add a new channel to control motor. (No need to touch motor)

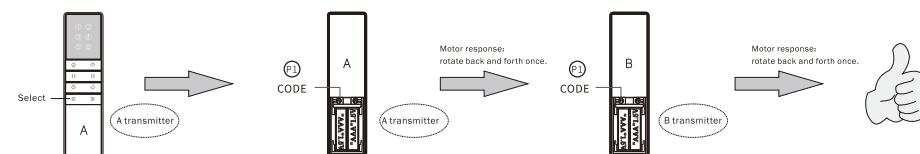


1. Select the channel that will be copied. 2. Press & Hold [code] button on transmitter about 10s. 3. Within 10s after motor stops, press [code] button on B transmitter


Reset direction Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

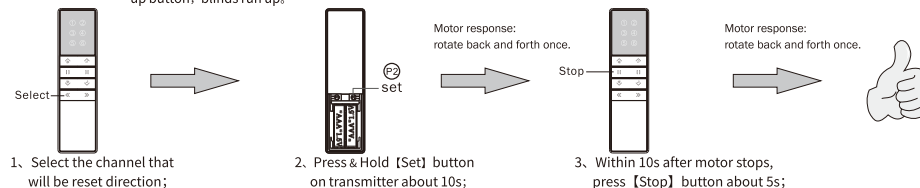

Transmitter sets limit: Ensure transmitter button direction matches the track direction before setting. If the directions are inconsistent, change direction first.

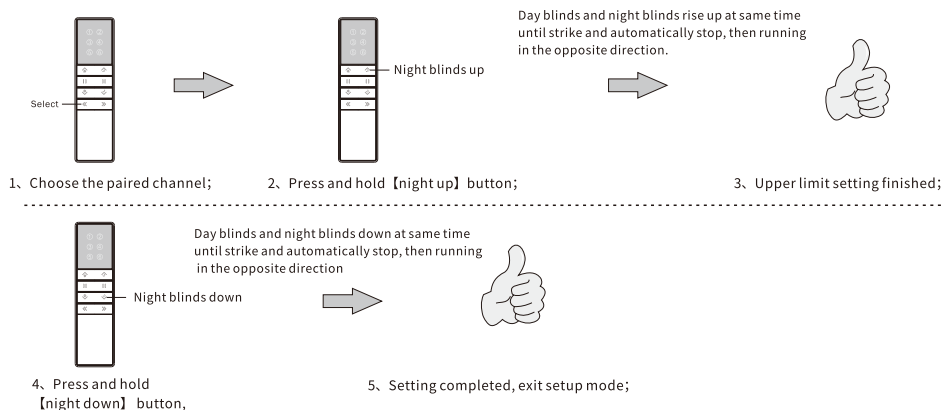

Favorite position Firstly must finish setting up and down limit

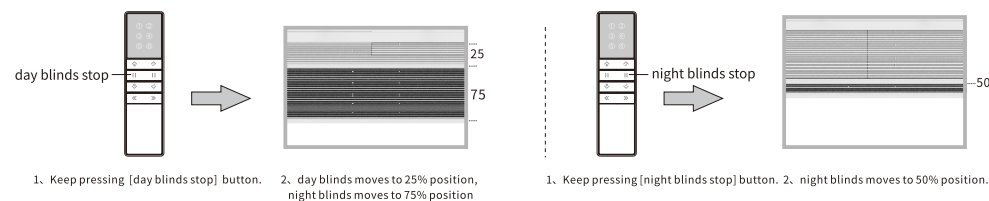

Delete limit

Restore factory settings Clean all paired codes from remote and all limits.

