
氛围灯开合帘电机说明书-IB

、司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。

A/0 H12193

产品简介

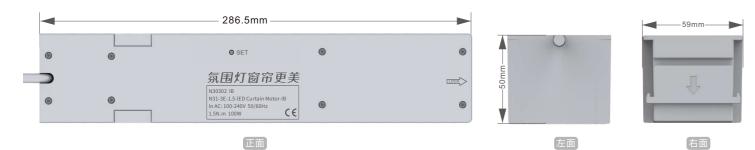

操作说明(*以A13-2频发射器为例进行说明,其它发射器请参考相应的发射器说明书。)



复制: 为已经对码的电机新增加一个发射器:



换向: 切换己对上码电机运转方向。如:换向前,按发射器打开键,窗帘关闭,则需要进行换向设置:



行程取消:

 




南料瓦湖东向和白田南料瓦湖沿京



恢复出厂设置:清除电机上所有设置并恢复至默认状态



干触点排线定义


1.红色线	公共端,接干触点开关公共端				
2.黄色线	LED 灯控制线,按一次 LED 灯打开, 再按一次 LED 灯关闭				
3.白色线	CLOSE 线,按一次开合电机合上,再按一次开合电机停止				
4.灰色线	OPEN线,按一次开合电机打开,再按一次开合电机停止				
5.绿色线	模式选择	(1) 做绝缘	黄色线-LED 灯控制线,按一次 LED 灯打开,再按一次 LED 灯关闭		
			白色线-CLOSE线,按一次开合电机合上,再按一次开合电机停止		
		(2)接到公共端	A、长按不放白色线按键,开合电机合上;松开按键,电机停止		
			B、长按不放灰色线按键,开合电机打开;松开按键,电机停止		
注·黄色线, 白色线, 灰色线根据自己喜好接到相应于触点按键					

注:黄色线、白色线、灰色线根据自己喜好接到相应干触点按键

控线示音图



Ambient light curtain motor instructions

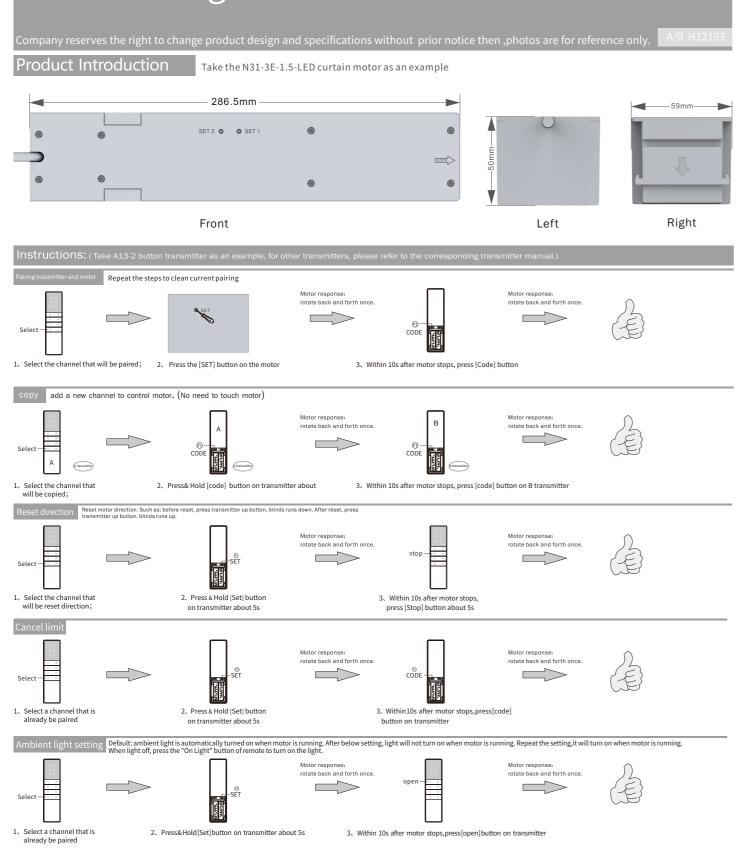

1. Select a channel that is

Press & Hold[Set]button on

3. Within 10s after motor stops, press

[close] button on transmitter

Restore factory settings clear all settings on the motor and restore to the default state

1.Press & Hold [Set-1] button on

2.Release and press [Set-1] again.

Dry contact wires description

1.red wire	Comm	Common		
2.yellow wi	re Contro	Control LED light, press to turn on LED light, press again to turn off LED light		
3.white wir	e Close	Close wire, press to close curtain, press again to stop curtain		
4. grey wire Open wire, press to open curtain, press again to stop curtain			in, press again to stop curtain	
5.Green wire	Choose model	(1) Make insulation	yellow wire-control LED light, press to turn on LED light, press again to turn off LED light	
			white wire-Close wire, press to close curtain, press again to stop curtain	
		(2) Connect Common	A. Keep pressing white wire button, curtain will close; Release button, curtain stops.	
			B、Keep pressing grey wire button, curtain will open; Release button, curtain stops.	

Remark: connect yellow, white and grey wires according to your will

Wiring diagram

