
K45-ELR管状电机X-NTY-说明书 公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。A/1 H12221 对码: 电机通电自动进入对码,5秒后超时,电机 消码: 清除电机上所有接收储存发射器的记忆,其它设置不会改变或清除。 正反转动提示 对码键一 1、长按发射器【对码键】约10s 2、长按【停止键】约5s 1、电机通电,5秒内按发射器【对码键】 遇阻功能: 默认开启,重复操作是打开和关闭相互切换。 正反转动提示 (PI) 3、长按【下行键】约5s 1、选择需要操作的频道 2、长按发射器【对码键】约10s 遇阻反弹/遇阻停止互换:默认开启遇阻反弹模式,重复操作是遇阻反弹与遇阻停止相互切换。(默认反弹约30cm,切换后遇阻停止不反弹) 正反转动提示 正反转动提示 -设置键 1、选择需要操作的频道 2、长按发射器【设置键】约10s 3、电机停止后10s内按【上行键+下行键】 点动/连动模式互换: 电机出厂默认为连动模式,切换为点动模式后,长按住【上行键】或【下行键】约2s电机会一直连动运转。 正反转动提示 正反转动提示 -设置键 1、选择需要切换的频道 2、长按发射器【设置键】约10s 3、电机停止后10s内按【上行键】约5s 轻抬上升/下降: 电机出厂默认关闭,开启后,窗帘在离上限位10厘米之内轻抬,电机下降; 否则在其他位置轻抬,电机上升。 正反转动提示 正反转动提示 洗择— 1、选择需要操作的频道 2、长按发射器【设置键】约10s 3、电机停止后10s内按【停止键+下行键】 面料修复: 电机出厂默认关闭,开启后,当电机正常下降并停止时,电机反向上升一点距离,修复面料褶皱。 正反转动提示 正反转动提示 设置键

3、电机停止后10s内按【上行键+停止键】

1、选择需要操作的频道

2、长按发射器【设置键】约10s

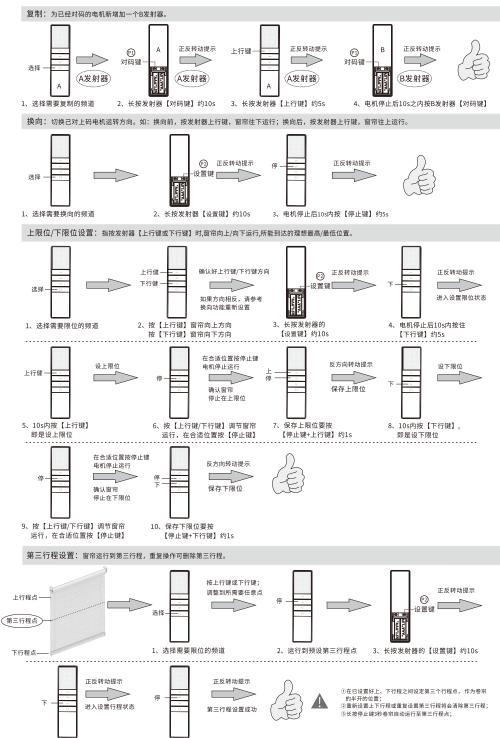

4、电机停止后10s内按【下行键】约5s 5、电机停止后10s内长按【停止键】约5s







正反转动提示

(P1)

对码键-

2、长按发射器【对码键】



02.等待搜索设备 03.输入WiFi密码,点击下一步







请输入Wi-Fi信息 选择设备工作 Wi-Fi 并输入密码

₹*****

A ******

04.等待设备连接


05.添加成功,点击完成

K45-ELR Tubular Motor-NTY Operating Manual Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12221 A/1 Pairing method: Motor enters pairing mode when Clear pairing: Clear all pairing on the motor: powered on, and exits after 5s (no any prompts). Motor response: rotate back and forth once. rotate back and rotate back and forth once. **(P1)** code code · 1、Press & Hold [Code] button on 2、press [Stop] button about 5s; Power on motor, press transmitter 【code】 within 5s Resistance function: enabled by default. Repeated operation is to open or close this function. Motor response rotate back and forth once. rotate back and forth once. (PI) code 1. Press & Hold [Code] button on 2. press [Down] button about 5s; Rebound or stop, when encountering resistance: The rebound function is turned on by default, and repeated operation is to switch between rebound or stop function when encountering resistance. (Default rebound about 30cm) rotate back and forth once. rotate back and forth once. 1.Select a channel that is 2、Press & Hold【Set】button on 3、Within 10s after motor stops, already be paired press [Up+Down] button together Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] Inching / Continuous moving interchange: button about 2s, motor will continuously moves: Motor response: rotate back and forth once. rotate back and forth once. 1、Select the channel that 2、Press & Hold【Set】button on 3、Within 10s after motor stops will be interchanged transmitter about 10s; press [Up] button about 5s Lightly lift to up or down: off by default. After turned on, when blinds are 10cm within top limit, lift the blinds to down, when blinds are out of 10cm, lift the blinds to up. **©**2 rotate back and forth once. rotate back and forth once 3、Within 10s after motor stops, 1.Select a channel that is 2、Press & Hold【Set】button on press [Stop+Down] button together; already be paired transmitter about 10s; Fabric finishing: off by default. After turned on, when blinds down normally and stop, the blinds will rises a little to make fabric neat, not plicated. Motor response rotate back and forth once. 1.Select a channel that is 2、Press & Hold【Set】button on Within 10s after motor stops,


already be paired

transmitter about 10s:

press [Up+Stop] button together;

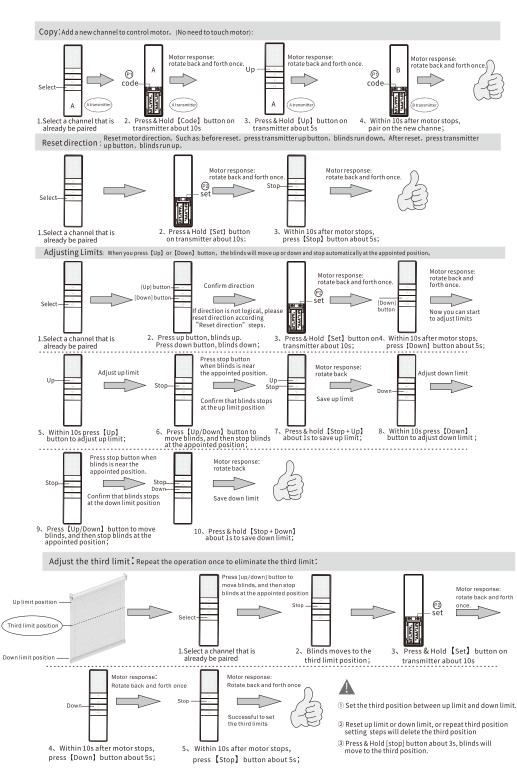

Reset Wi-Fi:

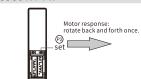








1、Press&Hold [Set] button

2、Press & hold [Code] button

Configure network method:





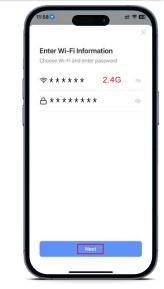


01.Open Tuya App, click "+" click "Add Device"

02. Waiting for device search


Tubular motor

03.Input Wi-Fi name and password, then click "next"

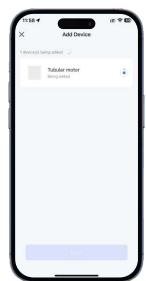

rotate back and forth



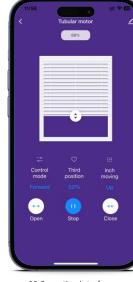

04. Waiting for connecting.

05. After added successfully, click "done"

06.Operation interface