


电 动卷帘机构图 注：带“*”号的是非本电机标配部件（可订制零件）

可选  *Ø38卷管  Ø28卷管


- 伸出右手握拳，大拇指头安装码。那么四指指是卷帘向下运行方向。

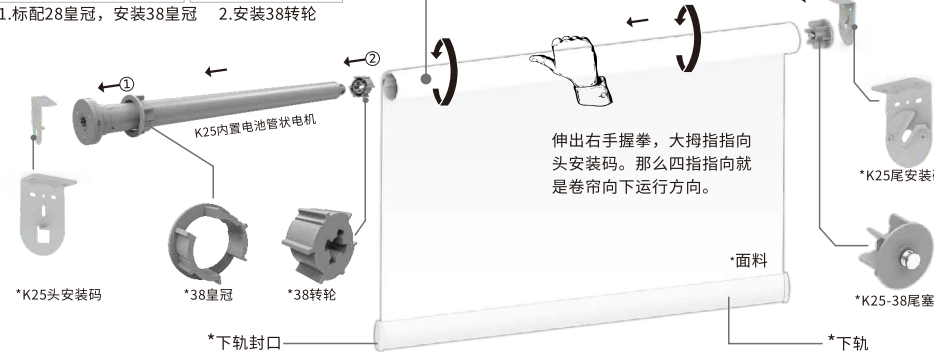

注：本产品不支持手拉功能；另外请使用带有“”图标或者L标签的专用发射器。如果产品长期不用，需要充满电，然后每隔12个月再次充满电以保持电池健康。

操作说明 (*以A13按键发射器为例进行说明, 其它发射器请参考相应的发射器说明书。)

对码： 重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码，再增加遥控器只会覆盖第一个：

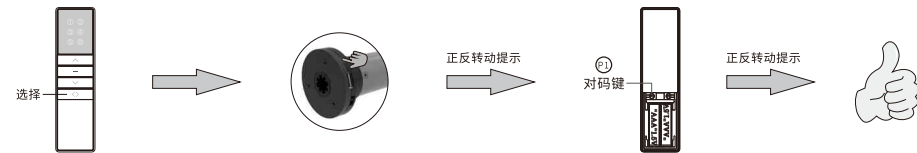


- 1、选择需要对码的频道； 2、按一下电机上【设定键】； 3、电机停止后10s内按一下【对码键】；

消码：清除电机上所有接收储存发射器的记忆，其它设置不会改变或清除：



- 1、按住电机【设定键】约10s
- 2、再次按一下【设定键】；

点动/连动模式互换：电机出厂默认为连动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机会一直连动运转：

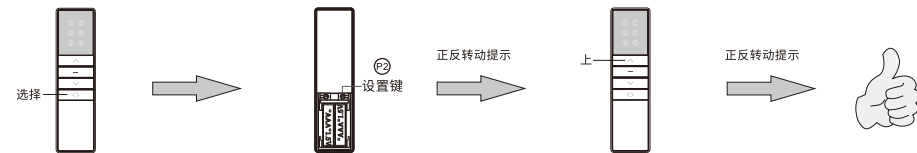

- 1、选择需要切换的频道； 2、长按发射器【设置键】约10s 3、电机停止后10s内按【上行键】约5s

复制：为已经对码的电机新增加一个B发射器：




- 1、选择需要复制的频道； 2、长按发射器【对码键】约10s 3、电机停止后10s之内按B发射器【对码键】

换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行：




- 1、选择需要换向的频道； 2、长按发射器【设置键】约10s 3、电机停止后10s内按【停止键】约5s


上限位/下限位设置：指按发射器【上行键或下行键】时，窗帘向上/向下运行，所能到达的理想最高/最低位置。

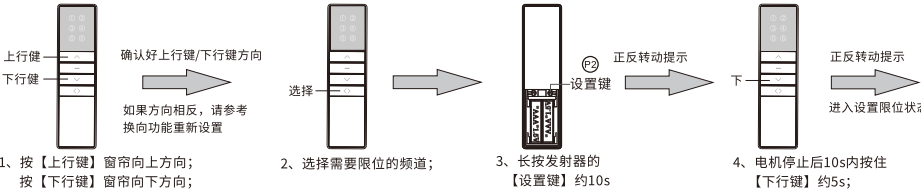

- 1、按【上行键】窗帘向上方向；
按【下行键】窗帘向下方向；
- 2、选择需要限位的频道；
- 3、长按发射器的【设置键】约10s
- 4、电机停止后10s内按住【下行键】约5s；

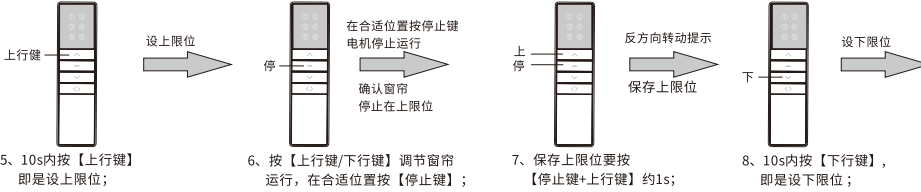


- 5、10s内按【上行键】
即是设上限位；
- 6、按【上行键/下行键】调节窗帘
运行，在合适位置按【停止键】；
- 7、保存上限位要按
【停止键+上行键】约1s；
- 8、10s内按【下行键】
即是设下限位；

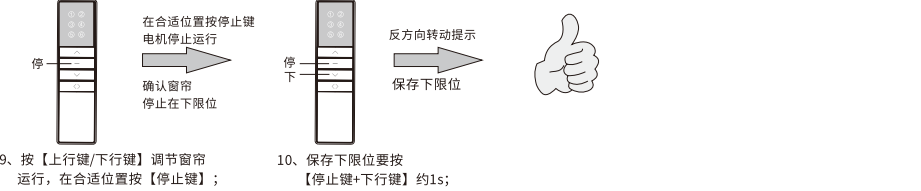


- 9、按【上行键/下行键】调节窗帘运行，在合适位置按【停止键】；
- 10、保存下限位要按【停止键+下行键】约1s；

第三行程设置： 重复操作设置将会取消第三行程点：

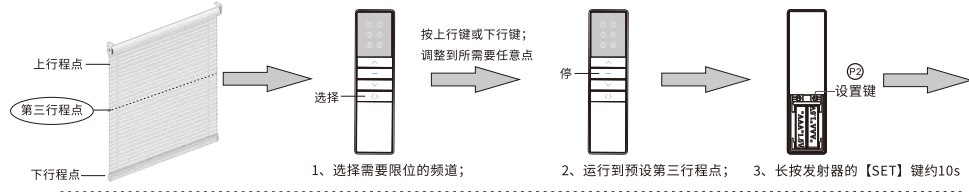


- 重点——
- 1、选择需要限位的频道；
 - 2、运行到预设第三行程点；
 - 3、长按发射器的【SET】键约10s

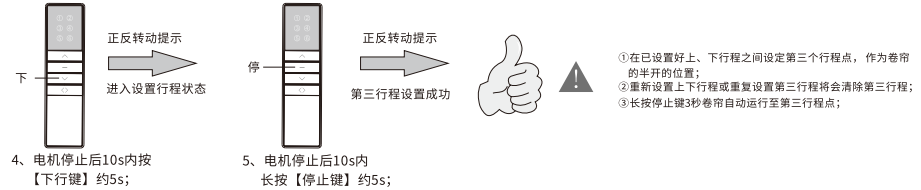

- 4、电机停止后10s内按【下行键】约5s;
- 5、电机停止后10s内长按【停止键】约5s;


- ①在已设置好上、下行程之间设定第三个行程点，作为卷帘的半开的位置；
- ②重新设置上下行程或重复设置第三行程将会清除第三行程；
- ③长按停止键3秒卷帘自动运行至第三行程点；

配网重置方法：

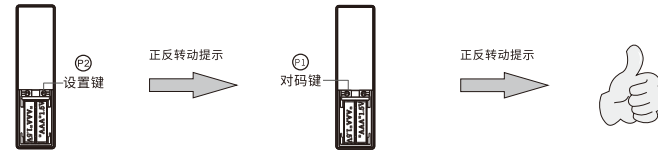


- 1、长按发射器【设置键】 2、长按发射器【对码键】

APP配网方法：操作前确保手机Wifi与网络数据已打开

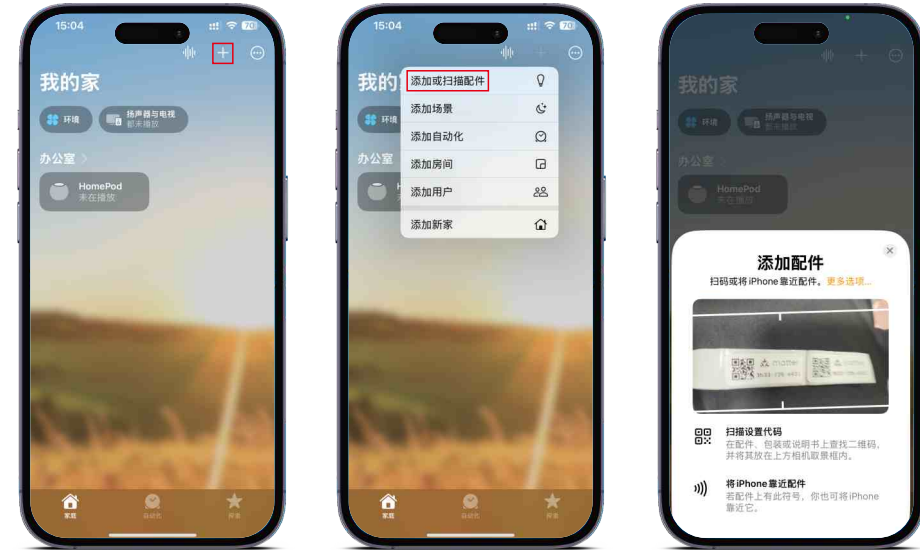

- 01.打开“家庭”APP，选择右上角的“+” 02.选择“添加或扫描配件” 03.扫描电机上的二维码

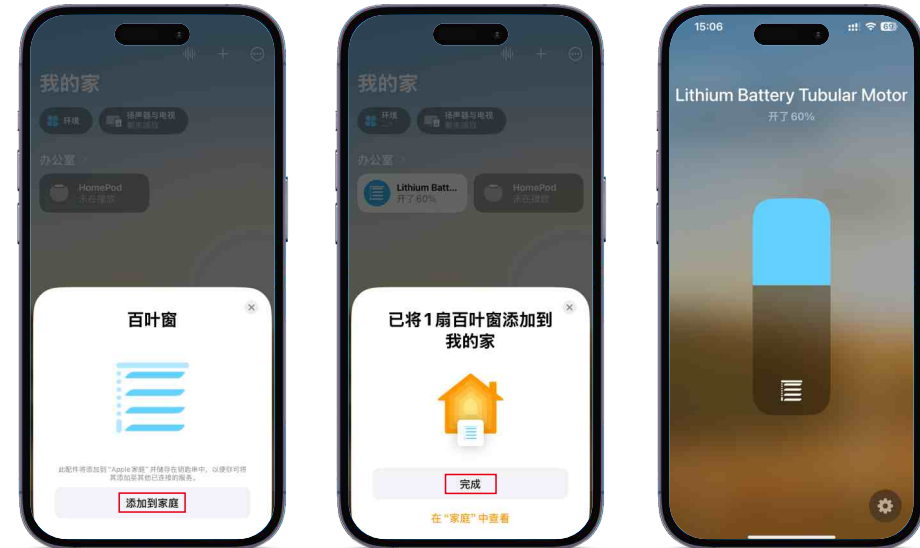


- 04.按提示完成操作后点击“添加到家庭” 05.添加成功，点击完成 06.最终操作界面如上图所示

K25-4E Tubular Motor-Matter Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12280 A/0


E Electric roller blind draft (If the accessory with "*" that mean could be OEM)

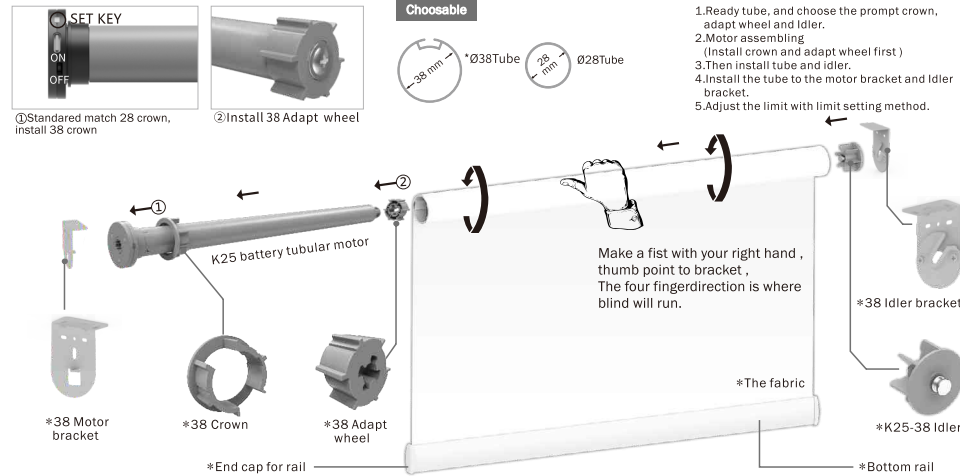


Note: This product does not support hand-pull function; Also use a dedicated transmitter with a "P" icon or an L-tag. Fully charge the product when not in use, and then recharge it every 12 months.

T Transmitter operating instructions (*Take A13 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

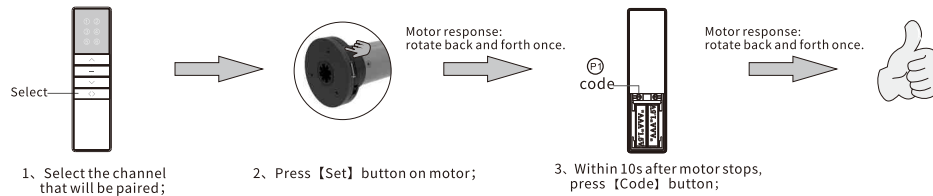


Clear pairing: Clear all pairing on the motor:

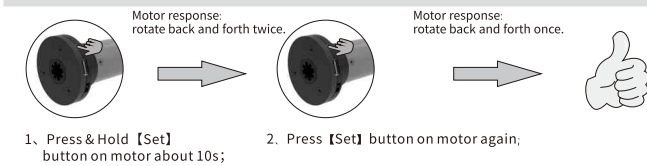


Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

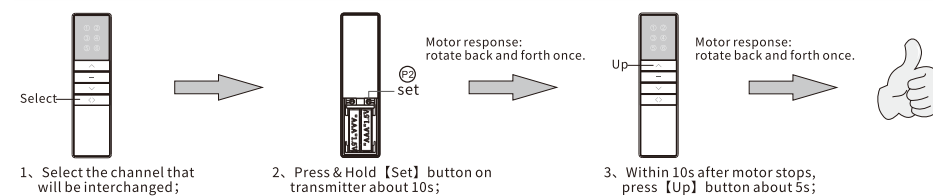


Copy: Add a new channel to control motor. (No need to touch motor):

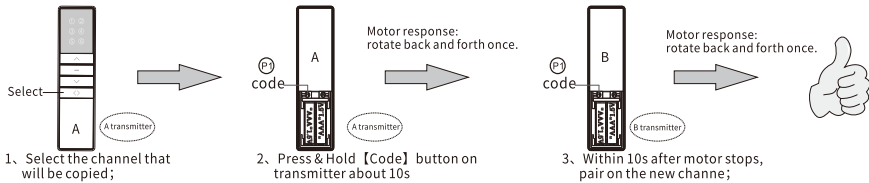


Reset direction: Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

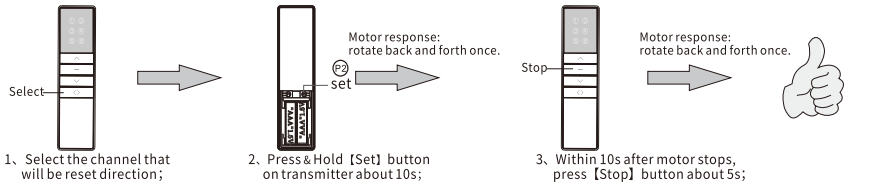

Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

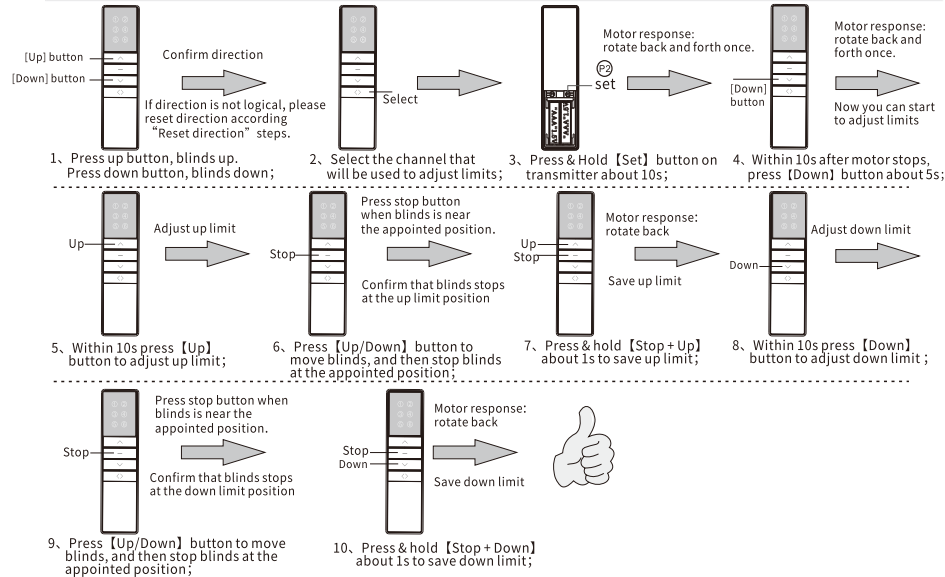


Adjust the third limit: Repeat the operation once to eliminate the third limit:

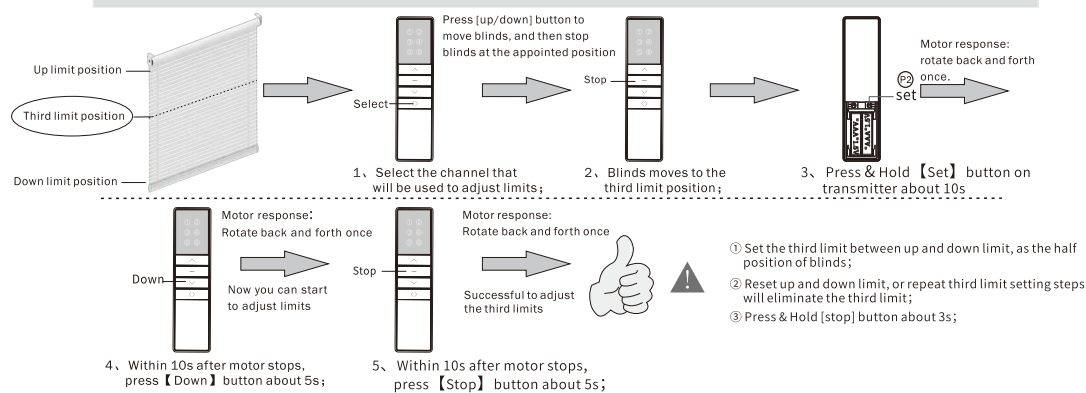


- Set the third limit between up and down limit, as the half position of blinds;
- Reset up and down limit, or repeat third limit setting steps will eliminate the third limit;
- Press & Hold [stop] button about 3s;

Reset Wi-Fi:

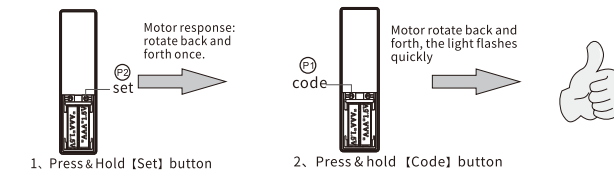


Configure network method: Before operation, make sure the WiFi and network of the mobile phone are turned on.

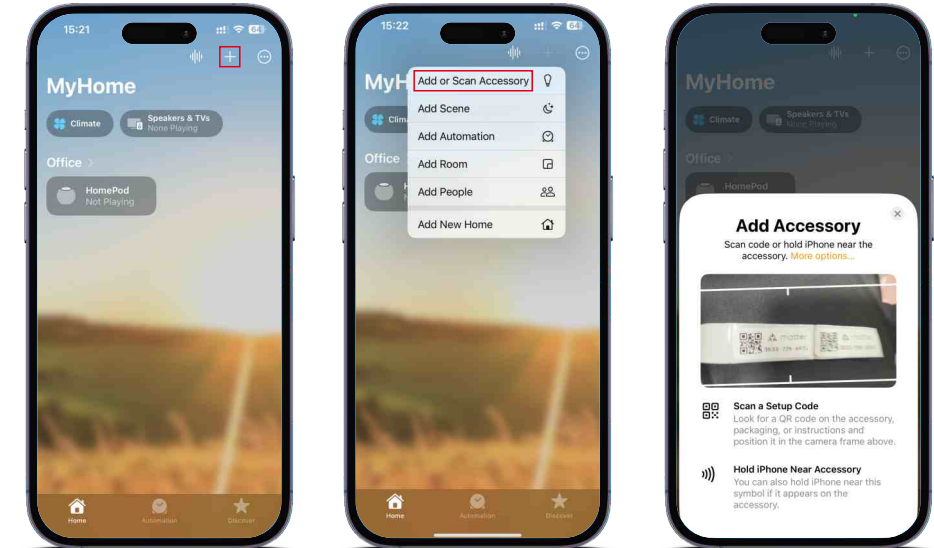

01. Open "Home" App, click "+"

02. Click "Add or Scan Accessory"

03. Scan code

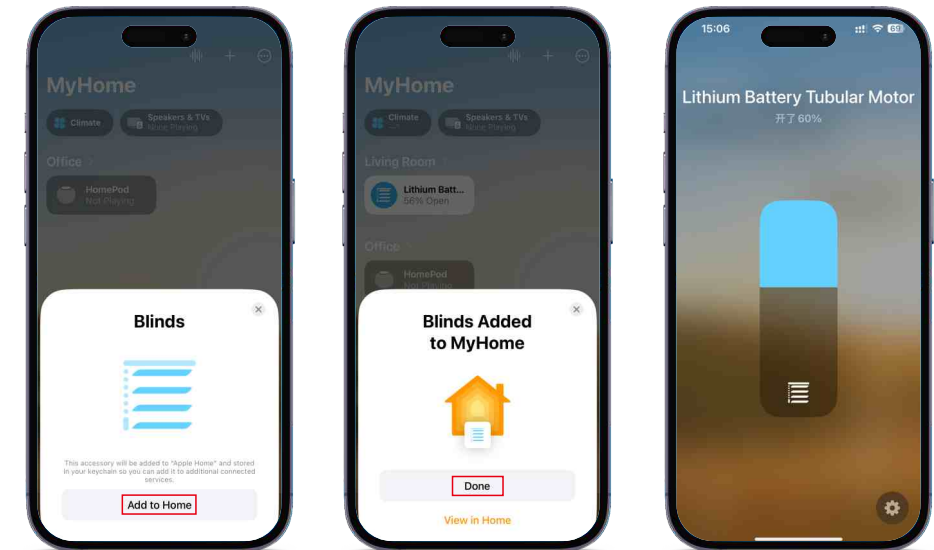

04. Follow the prompts to complete the operation, click "Add to Home"

05. After added successfully, click "done"

06. Operation interface