


E19嵌入式百叶帘电机说明书


公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。 A/0 H12163

产品简介

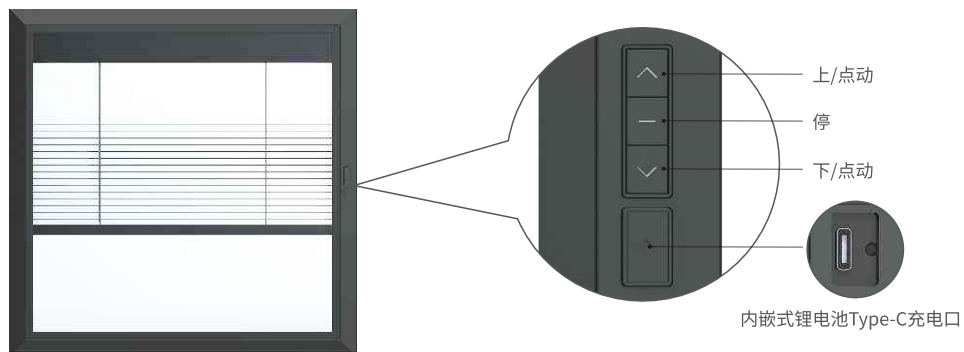


操作说明 (*以A13-6发射器为例进行说明,其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码,再增加遥控器只会覆盖第一个:

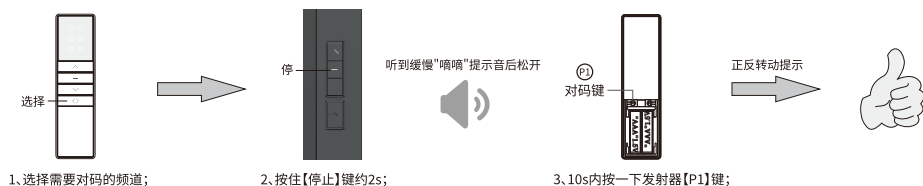


消码: 重复操作相互切换

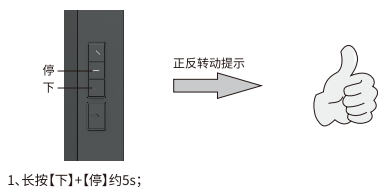


点动连动切换: 重复操作相互切换

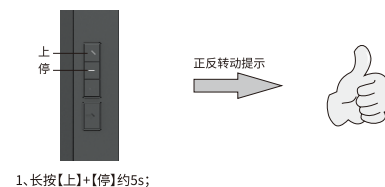


遥控器换向: 重复操作电机正反转方向切换

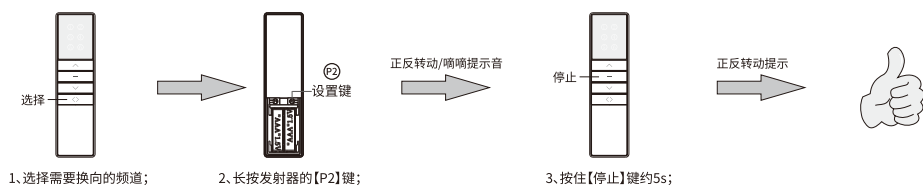


自锁功能: 锁住控制面板上下键和遥控操作,重复操作是解锁

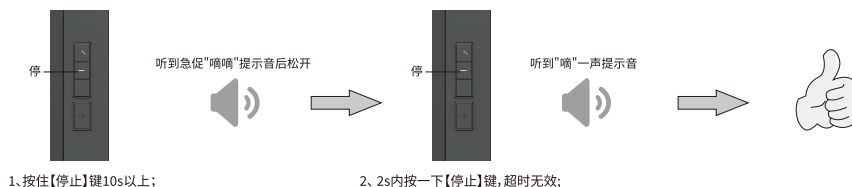


控制面板换向: 重复操作电机正反转方向切换

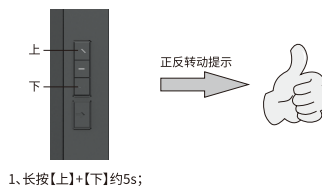

遥控器设置行程: ⚠ 必须先设上行程,再设下行程,重复操作将会覆盖当前行程,30s内无操作自动退出设置状态:

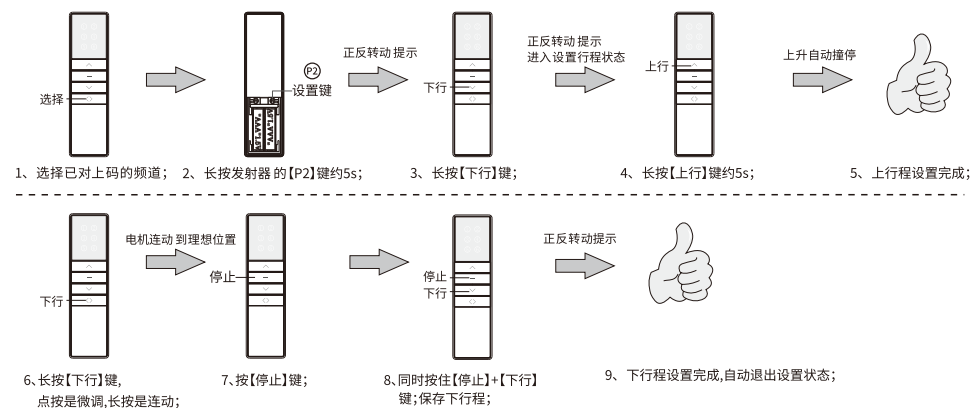


控制面板设置行程: ⚠ 必须先设上行程,再设下行程,重复操作将会覆盖当前行程,30s内无操作自动退出设置状态:

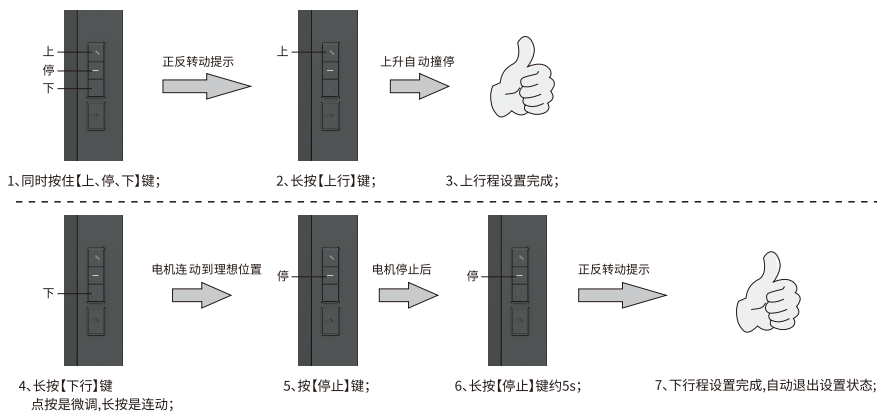

E19 Embedded Venetian Blind Motor Instructions

Company reserves the right to change product design and specifications without prior notice then ,photos are for reference only. A/O H12163

Product profile

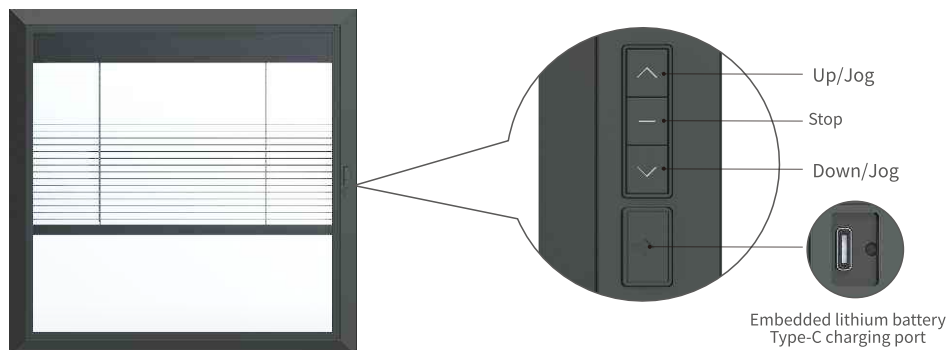


Instructions: (Take A13 button transmitter as an example, for other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeating the pairing steps to delete current pairing.A motor can store up to 5 channels, add new channel, the earliest channel will be deleted;




Clear pairing : Repeat to switch between the two modes

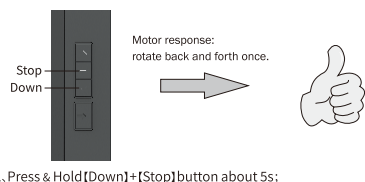


Jog-to-continuously moving switching: Repeat to switch between the two modes

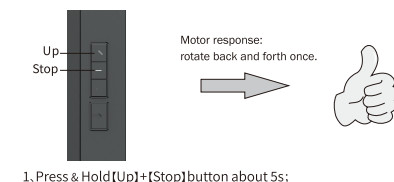


Change direction with remote control: repeat to switch directions.

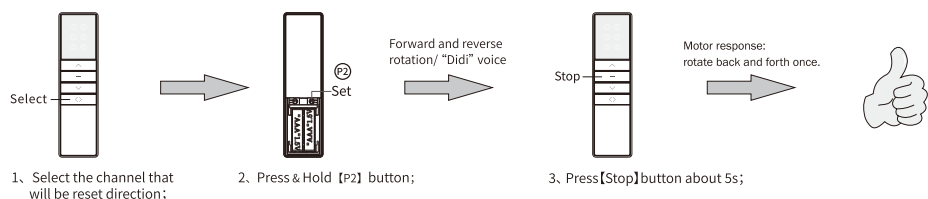



Self-locking function: Locks up/down buttons and remote control operations. Repeating the operation to unlock.

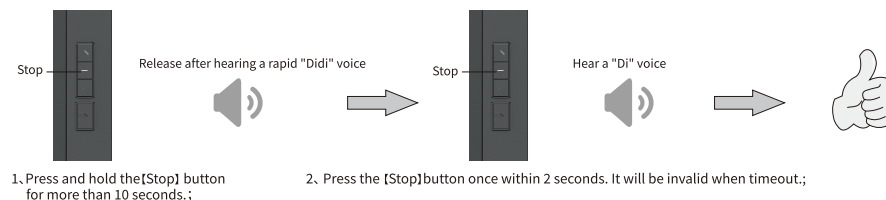

Change direction with control panel : repeat to switch directions.

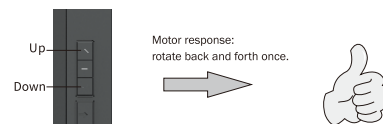

Remote control sets limits: Upper limit has to be the first, then the lower limit. Repeating the operations will set a new upper and lower limit.

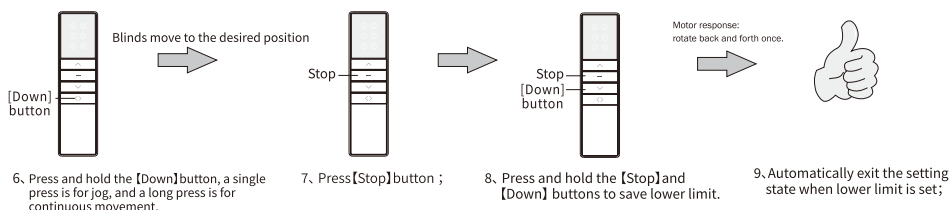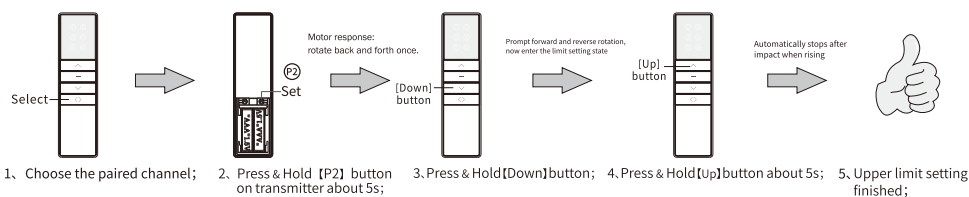

Control panel sets limits: Upper limit has to be the first, then the lower limit. Repeating the operations will set a new upper and lower limit.

