

E40-3E/EL百叶电机说明书

公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。 A/0 H12254


产品简介



正面




侧面

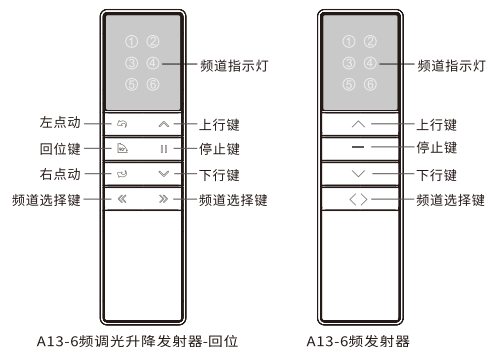

操作说明 (*A13-6频调光升降发射器-回位进行说明,其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码,再增加遥控器只会覆盖第一个:

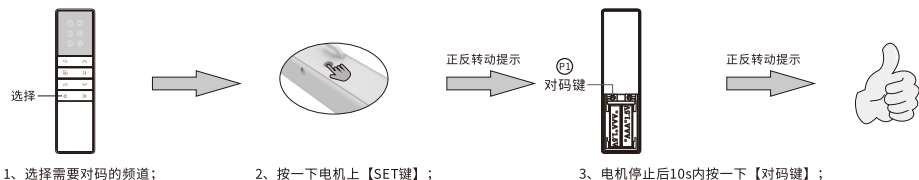


消码: 清除电机上所有接收储存发射器的记忆,其它设置不会改变或清除:



点动/连动模式互换: 电机出厂默认为连动模式,切换为点动模式后,长按住【上行键】或【下行键】约2s电机一直连动运转:

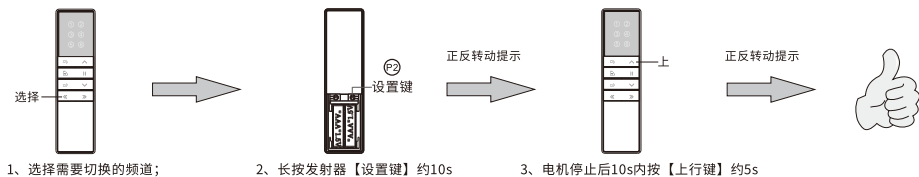

 转速设置: 二档转速可调节,第一档转速23r/min 第二档转速28r/min,出厂前默认第一档:



1、按住电机的【SET键】约15s

切换3E/4E模式: 仅适用于12V短款电机 出厂默认为4E模式,重复操作是3E/4E相互切换:




1、电机断电按住【SET键】 2、接通电源

复制: 为已经对码的电机新增一个B发射器:






1、选择需要复制的频率; 2、长按发射器【对码键】约10s 3、电机停止后10s之内按B发射器【对码键】

换向: 切换已对上码电机运转方向。如: 换向前,按发射器上行键,窗帘往下运行;换向后,按发射器上行键,窗帘往上运行:


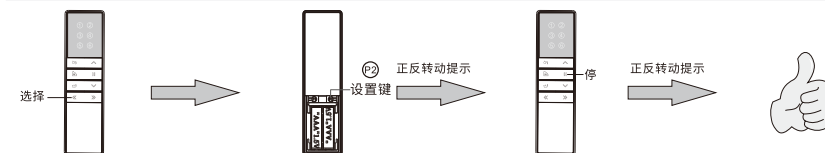


1、选择需要换向的频率; 2、长按发射器【设置键】约10s 3、电机停止后10s内按【停止键】约5s

上限位/下限位设置: 指按发射器【上行键或下行键】时,窗帘向上/向下运行,所能到达的理想最高/最低位置。

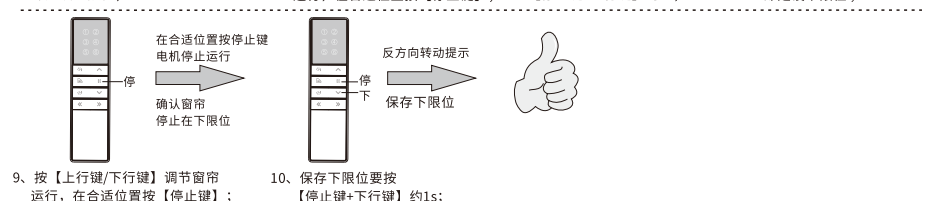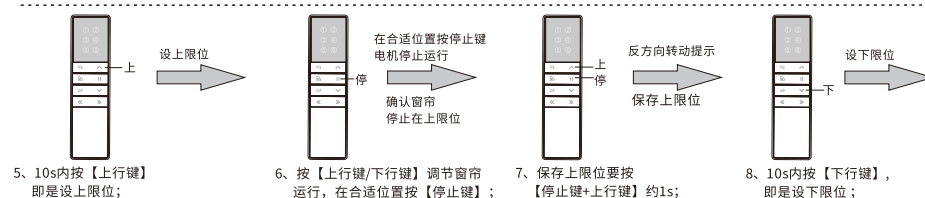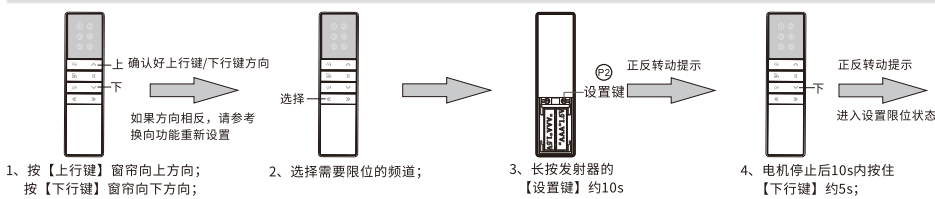

第三行程设置: 重复操作设置将会取消第三行程点:

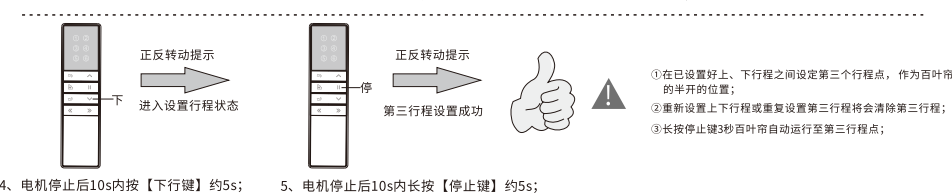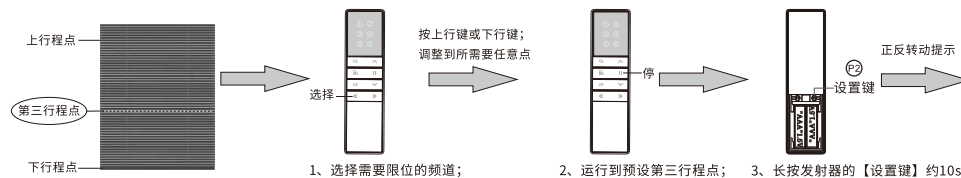


①在已设置好上、下行程之间设定第三个行程点,作为百叶帘的半开的位置;
②重新设置上下行程或重复设置第三行程将会清除第三行程;
③长按停止键3秒百叶帘自动运行至第三行程点;

E40-3E/ELVenetian Blinds Motor Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12254 A/0

 
Product introduction



Front



Side

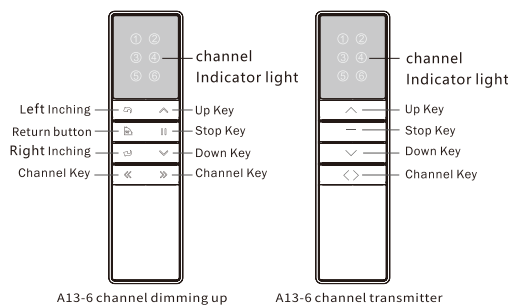


A13-6 channel dimming up down transmitter - return

A13-6 channel transmitter


Transmitter operating instructions

(*Take A13-6 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

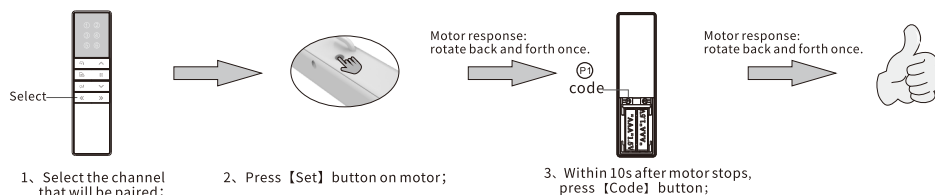

Clear pairing: Clear all pairing on the motor:

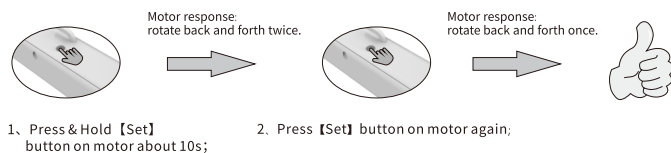

Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

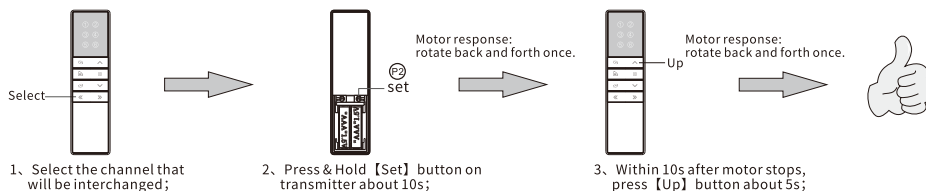

Speed setting: two-speed can be adjusted, the first speed is 23r/min, the second speed is 28r/min, the first speed is defaulted before leaving the factory

3E/4E interchange: Only suitable for 12V short motor, The factory default is 4E mode, and the repeated operation is to switch between 3E/4E:




1. Press & Hold [Set] button on motor about 15s;


1. The motor is powered off and press the [SET] button

2. Turn on the power


Copy: Add a new channel to control motor. (No need to touch motor):

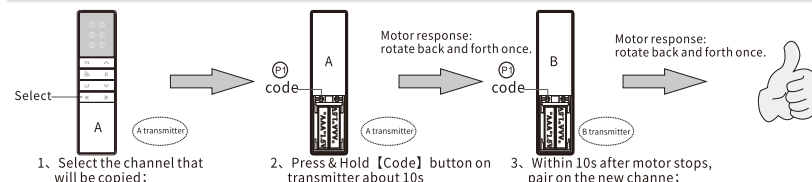


Reset direction: Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

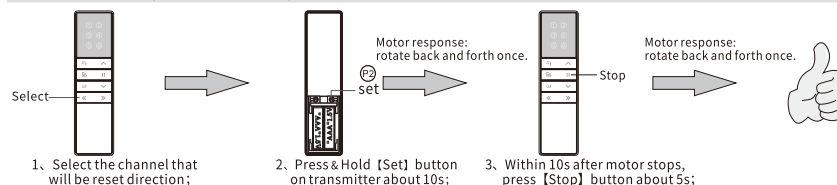

Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

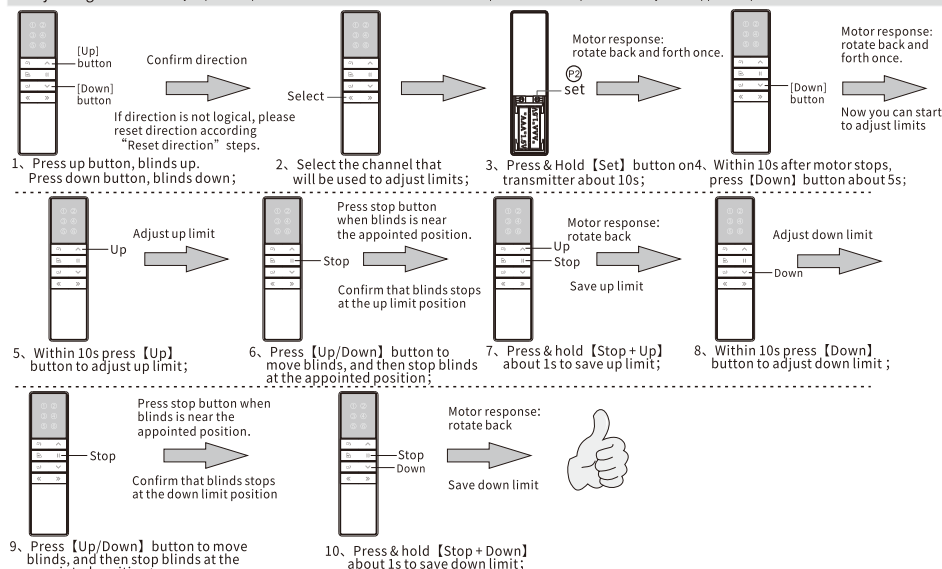

Adjust the third limit: Repeat the operation once to eliminate the third limit:

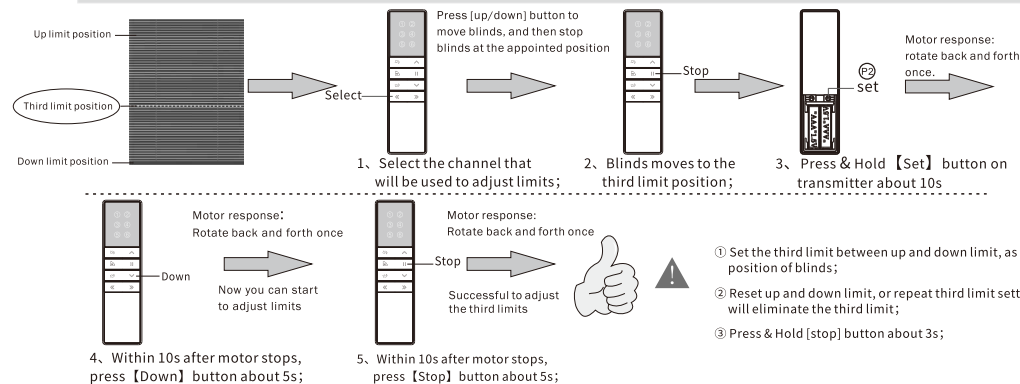

- ① Set the third limit between up and down limit, as the half position of blinds;
- ② Reset up and down limit, or repeat third limit setting steps will eliminate the third limit;
- ③ Press & Hold [stop] button about 3s;