

K35-IP系列管状电机使用说明书


公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。H90910 A/2

电气原理图与接线方法

110V/220V 接线图





电动卷帘机构图 注：带“*”号的是非本电机标配部件（可订制零件）

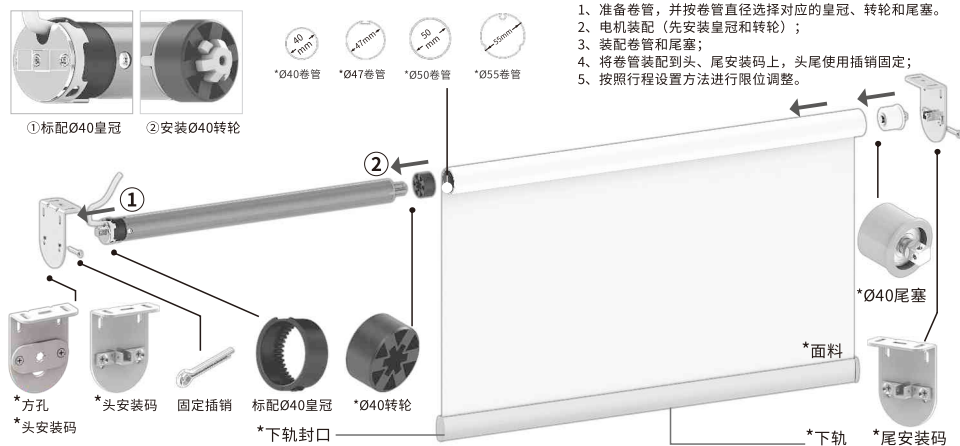


注：正确安装卷帘后面料应贴着窗户上下卷动

卷帘卷动方向示意图：

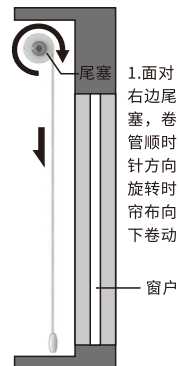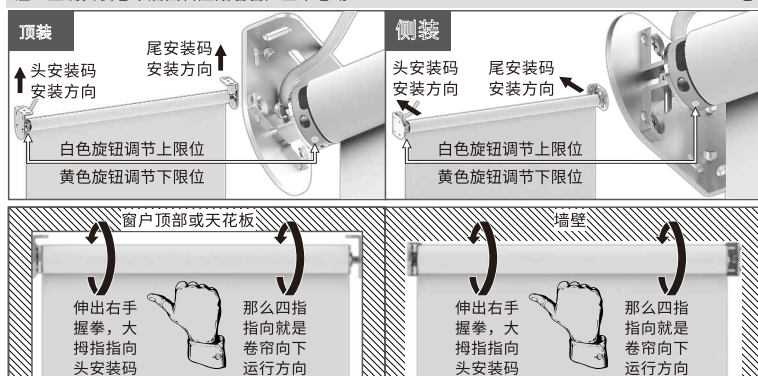


操作说明 (*以A3按键发射器为例进行说明，其它请参考相应的说明书。)


对码：重复操作对码步骤即是消除当前码。一台电机最多储存10个发射通道，再增加新发射通道只会循环覆盖最后一个通道：

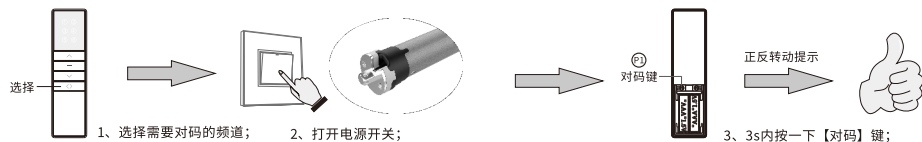


消全码：只保留当前的频道码

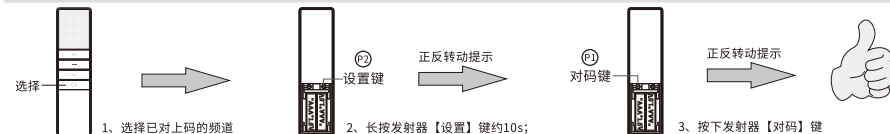


复制：为已经对码的电机新增一个发射器：

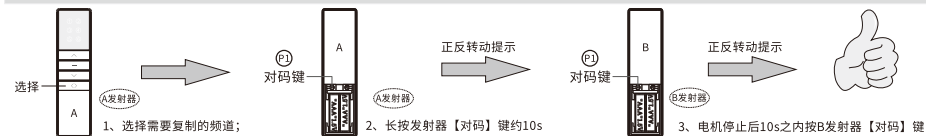

换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行：

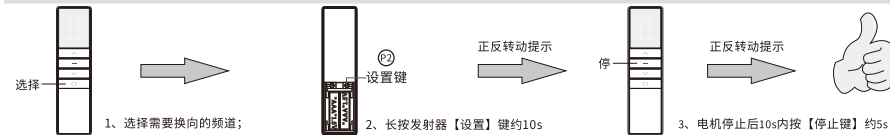


点动/连动模式互换：电机出厂默认认为连动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机会一直连动运转：

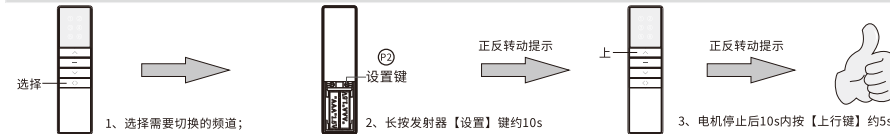


行程调节方法 (注：先调节下限位后调节上限位) 温馨提示：若窗帘的运行方向与遥控器控制方向不一致时，请参照换向设置操作即可。

下限位行程调节方法 (*以A3按键发射器为例进行说明，其它请参考相应的说明书。)

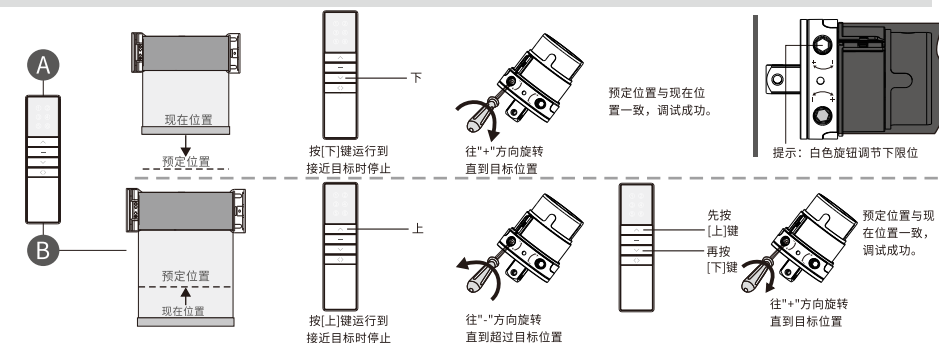

上限位行程调节方法 (*以A3按键发射器为例进行说明，其它请参考相应的说明书。)

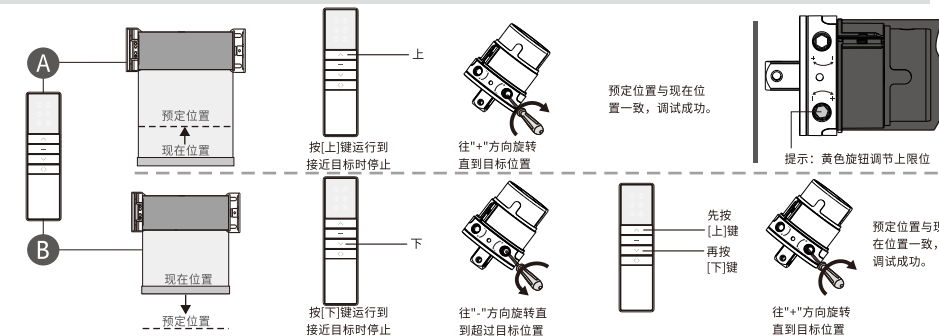


K35-IP Series Tubular Motor Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H90910 A/2


Electrical diagrams and wiring method

 110V/220V wiring diagram





Electric roller blind draft

Note: the accessories which mark with "*" are not standard assembly unit. (Available for custom made accessories.)

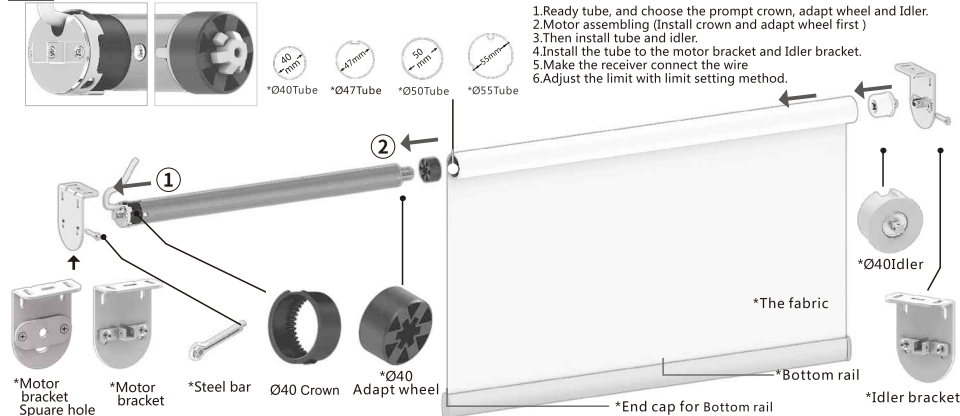


Note: Try to operate the whole roller blinds after installation, especially to check the fabric straight or not.

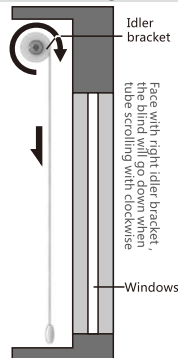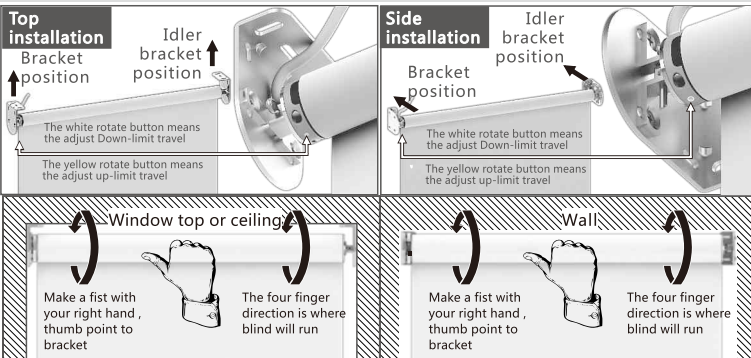


Operating instructions

(Take A3 button transmitter as an example. For others, please refer to the corresponding manual)


Pairing transmitter and motor : Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 10 transmitter channels , Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1~10. If you add channel 11 , paired channels will be 2~11.

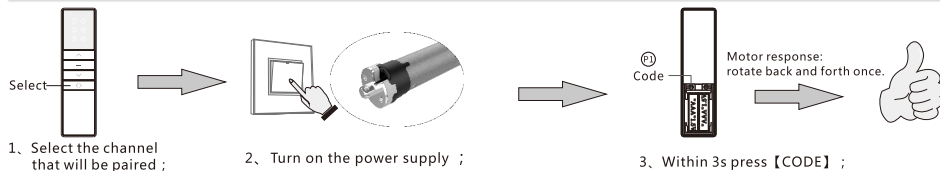


Clear all pairing: Only save current pairing

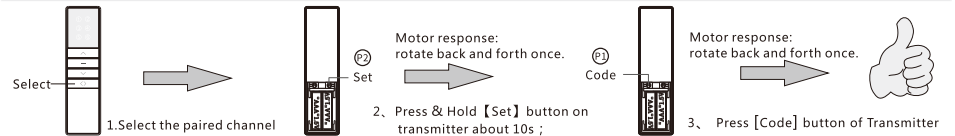


Copy : Add a new channel to control motor. (No need to touch motor) :

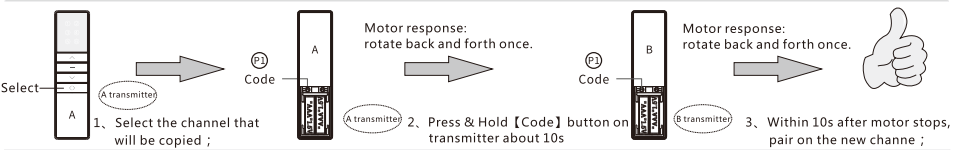

Reset direction : Reset motor direction. Such as: before reset , press transmitter up button , blinds run down. After reset , press transmitter up button , blinds run up.

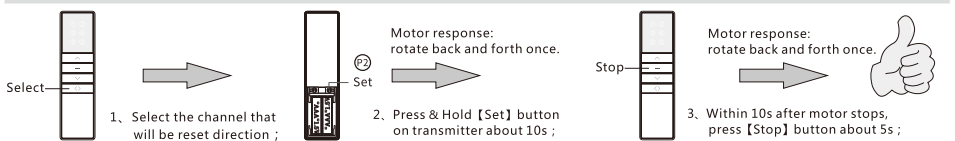

Inching / Continuous moving interchange : Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves :

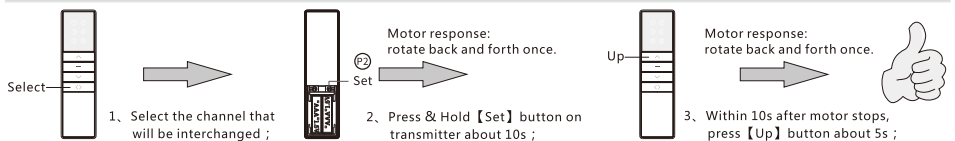


Limit travel adjustment method

*First adjust Down-limit travel and then up-limit travel.

Kindly remind: If the curtain's running direction does not match the remote controller's control direction, refer to the commutation setting operation.

Down-limit travel adjustment method (Take A3 button transmitter as an example. For others please refer to the corresponding manual)

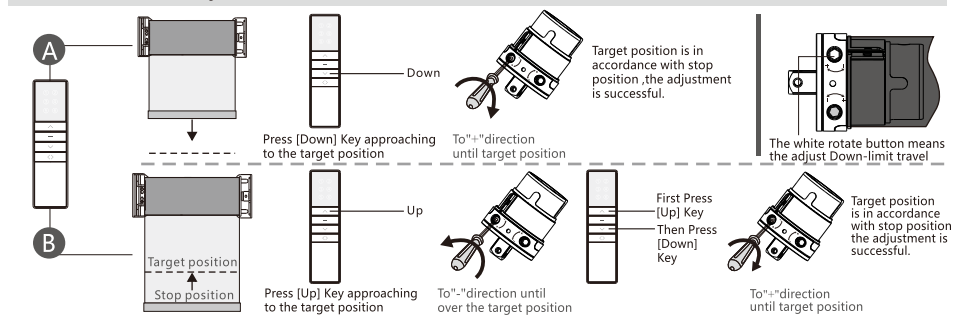

Up-limit travel adjustment method (Take A3 button transmitter as an example. For others please refer to the corresponding manual)

